

# **EC21** Hardware Design

## **LTE Module Series**

Rev. EC21\_Hardware\_Design\_V1.4

Date: 2017-03-01



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

#### **Quectel Wireless Solutions Co., Ltd.**

Office 501, Building 13, No.99, Tianzhou Road, Shanghai, China, 200233

Tel: +86 21 5108 6236 Email: info@quectel.com

## Or our local office. For more information, please visit:

http://www.quectel.com/support/salesupport.aspx

### For technical support, or to report documentation errors, please visit:

http://www.quectel.com/support/techsupport.aspx

Or email to: Support@quectel.com

#### **GENERAL NOTES**

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. THE INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

#### **COPYRIGHT**

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2017. All rights reserved.



## **About the Document**

## **History**

Revision	Date	Author	Description		
1.0	2016-04-15	Yeoman CHEN	Initial		
1.1	2016-09-22	Yeoman CHEN/ Frank WANG/ Lyndon LIU	<ol> <li>Updated frequency bands in Table 1.</li> <li>Updated transmitting power, supported maximum baud rate of main UART, supported internet protocols, supported USB drivers of USB interface, and temperature range in Table 2.</li> <li>Updated timing of turning on module in Figure 12.</li> <li>Updated timing of turning off module in Figure 13.</li> <li>Updated timing of resetting module in Figure 16.</li> <li>Updated main UART supports baud rate in Chapter 3.11.</li> <li>Added notes for ADC interface in Chapter 3.13.</li> <li>Updated GNSS Performance in Table 21.</li> <li>Updated operating frequencies of module in Table 23.</li> <li>Added current consumption in Chapter 6.4.</li> <li>Updated RF output power in Chapter 6.5.</li> <li>Added RF receiving sensitivity in Chapter 6.6.</li> </ol>		
1.2	2016-11-04	Lyndon LIU/ Michael ZHANG	<ol> <li>Added SGMII and WLAN interfaces in Table 2.</li> <li>Updated function diagram in Figure 1.</li> <li>Updated pin assignment (Top View) in Figure 2.</li> <li>Added description of SGMII and WLAN interfaces in Table 4.</li> <li>Added SGMII interface in Chapter 3.17.</li> <li>Added WLAN interface in Chapter 3.18.</li> <li>Added USB_BOOT interface in Chapter 3.19.</li> <li>Added reference design of RF layout in Chapter 5.1.4.</li> <li>Added current consumption of EC21-V in Chapter</li> </ol>		



			6.4.
			10. Added note about SIMO in Chapter 6.6.
			1. Updated frequency bands in Table 1.
			2. Updated function diagram in Figure 1.
		Lyndon LIU/ Rex WANG	3. Updated pin assignment (top view) in Figure 2.
			4. Added BT interface in Chapter 3.18.2.
			5. Updated reference circuit of wireless connectivity
			interfaces with FC20 module in Figure 29.
1.3	2017-01-24		6. Updated GNSS performance in Table 24.
			7. Updated module operating frequencies in Table 26.
			8. Added EC21-AUV current consumption in Table 38.
			9. Updated EC21-A conducted RF receiving sensitivity
			of in Table 42.
			10. Added EC21-J conducted RF receiving sensitivity in
			Table 48.
1.4	2017-03-01	Geely YANG	Deleted the LTE band TDD B41 of EC21-CT



## **Contents**

Ab	bout the Document	2
Со	ontents	4
Tal	able Index	6
Fig	igure Index	8
1	Introduction	10
	1.1. Safety Information	11
2	Product Concept	12
_	2.1. General Description	
	2.2. Key Features	
	2.3. Functional Diagram	
	2.4. Evaluation Board	
3	Application Interfaces	17
	3.1. General Description	17
	3.2. Pin Assignment	18
	3.3. Pin Description	19
	3.4. Operating Modes	28
	3.5. Power Saving	28
	3.5.1. Sleep Mode	28
	3.5.1.1. UART Application	28
	3.5.1.2. USB Application with USB Remote Wakeup Function	29
	3.5.1.3. USB Application with USB Suspend/Resume and RI Function	30
	3.5.1.4. USB Application without USB Suspend Function	31
	3.5.2. Airplane Mode	32
	3.6. Power Supply	32
	3.6.1. Power Supply Pins	32
	3.6.2. Decrease Voltage Drop	33
	3.6.3. Reference Design for Power Supply	34
	3.6.4. Monitor the Power Supply	35
	3.7. Turn on and off Scenarios	35
	3.7.1. Turn on Module Using the PWRKEY	35
	3.7.2. Turn off Module	37
	3.7.2.1. Turn off Module Using the PWRKEY Pin	37
	3.7.2.2. Turn off Module Using AT Command	37
	3.8. Reset the Module	38
	3.9. USIM Card Interface	39
	3.10. USB Interface	41
	3.11. UART Interfaces	43
	3.12. PCM and I2C Interfaces	45
	3.13. ADC Function	48
	3.14. Network Status Indication	49



	3.15. STATUS	50
	3.16. Behavior of the RI	51
	3.17. SGMII Interface	51
	3.18. Wireless Connectivity Interfaces	54
	3.18.1. WLAN Interface	56
	3.18.2. BT Interface*	56
	3.19. USB_BOOT Interface	57
4	GNSS Receiver	58
	4.1. General Description	
	4.2. GNSS Performance	58
	4.3. Layout Guidelines	59
5	Antenna Interfaces	
	5.1. Main/Rx-diversity Antenna Interface	
	5.1.1. Pin Definition	
	5.1.2. Operating Frequency	
	5.1.3. Reference Design of RF Antenna Interface	
	5.1.4. Reference Design of RF Layout	
	5.2. GNSS Antenna Interface	
	5.3. Antenna Installation	
	5.3.1. Antenna Requirement	
	5.3.2. Recommended RF Connector for Antenna Installa	
6	Electrical, Reliability and Radio Characteristics	
	6.1. Absolute Maximum Ratings	
	6.2. Power Supply Ratings	
	6.3. Operating Temperature	
	6.4. Current Consumption	
	6.5. RF Output Power	
	6.6. RF Receiving Sensitivity	76
	6.7. Electrostatic Discharge	80
7	Mechanical Dimensions	
	7.1. Mechanical Dimensions of the Module	
	7.2. Recommended Footprint	
	7.3. Design Effect Drawings of the Module	84
8	Storage, Manufacturing and Packaging	
	8.1. Storage	
	8.2. Manufacturing and Soldering	
	8.3. Packaging	
9	• •	
10 11		
12	P.P	
14	Appendix beboe inodulation and coding schemes	



## **Table Index**

TABLE 1: FREQUENCY BANDS OF EC21 SERIES MODULE	12
TABLE 2: EC21 KEY FEATURES OF EC21 MODULE	13
TABLE 3: I/O PARAMETERS DEFINITION	19
TABLE 4: PIN DESCRIPTION	19
TABLE 5: OVERVIEW OF OPERATING MODES	28
TABLE 6: VBAT AND GND PINS	33
TABLE 7: PWRKEY PIN DESCRIPTION	
TABLE 8: RESET_N PIN DESCRIPTION	38
TABLE 9: PIN DEFINITION OF THE USIM CARD INTERFACE	
TABLE 10: PIN DESCRIPTION OF USB INTERFACE	41
TABLE 11: PIN DEFINITION OF THE MAIN UART INTERFACE	
TABLE 12: PIN DEFINITION OF THE DEBUG UART INTERFACE	
TABLE 13: LOGIC LEVELS OF DIGITAL I/O	
TABLE 14: PIN DEFINITION OF PCM AND I2C INTERFACES	46
TABLE 15: PIN DEFINITION OF THE ADC	
TABLE 16: CHARACTERISTIC OF THE ADC	
TABLE 17: PIN DEFINITION OF NETWORK CONNECTION STATUS/ACTIVITY INDICATOR	49
TABLE 18: WORKING STATE OF NETWORK CONNECTION STATUS/ACTIVITY INDICATOR	
TABLE 19: PIN DEFINITION OF STATUS	
TABLE 20: BEHAVIOR OF THE RI	
TABLE 21: PIN DEFINITION OF THE SGMII INTERFACE	
TABLE 22: PIN DEFINITION OF WIRELESS CONNECTIVITY INTERFACES	
TABLE 23: PIN DEFINITION OF USB_BOOT INTERFACE	
TABLE 24: GNSS PERFORMANCE	58
TABLE 25: PIN DEFINITION OF THE RF ANTENNA	
TABLE 26: MODULE OPERATING FREQUENCIES	
TABLE 27: PIN DEFINITION OF GNSS ANTENNA INTERFACE	64
TABLE 28: GNSS FREQUENCY	64
TABLE 29: ANTENNA REQUIREMENTS	
TABLE 30: ABSOLUTE MAXIMUM RATINGS	68
TABLE 31: POWER SUPPLY RATINGS	
TABLE 32: OPERATING TEMPERATURE	
TABLE 33: EC21-A CURRENT CONSUMPTION	
TABLE 34: EC21-AUT CURRENT CONSUMPTION	
TABLE 35: EC21-E CURRENT CONSUMPTION	
TABLE 36: EC21-KL CURRENT CONSUMPTION	
TABLE 37: EC21-V CURRENT CONSUMPTION	
TABLE 38: EC21-AUV CURRENT CONSUMPTION	
TABLE 39: GNSS CURRENT CONSUMPTION OF EC21 SERIES MODULE	
TABLE 40: RF OUTPUT POWER	
TABLE 41: EC21-E CONDUCTED RF RECEIVING SENSITIVITY	76



TABLE 42: EC21-A CONDUCTED RF RECEIVING SENSITIVITY	77
TABLE 43: EC21-V CONDUCTED RF RECEIVING SENSITIVITY	77
TABLE 44: EC21-AUT CONDUCTED RF RECEIVING SENSITIVITY	77
TABLE 45: EC21-AUTL CONDUCTED RF RECEIVING SENSITIVITY	78
TABLE 46: EC21-KL CONDUCTED RF RECEIVING SENSITIVITY	78
TABLE 47: EC21-CT CONDUCTED RF RECEIVING SENSITIVITY	78
TABLE 48: EC21-J CONDUCTED RF RECEIVING SENSITIVITY	79
TABLE 49: EC21-AUV CONDUCTED RF RECEIVING SENSITIVITY	79
TABLE 50: ELECTROSTATIC DISCHARGE CHARACTERISTICS	80
TABLE 51: RELATED DOCUMENTS	88
TABLE 52: TERMS AND ABBREVIATIONS	88
TABLE 53: DESCRIPTION OF DIFFERENT CODING SCHEMES	92
TABLE 54: GPRS MULTI-SLOT CLASSES	93
TABLE 55: EDGE MODULATION AND CODING SCHEMES	94



## Figure Index

FIGURE 1: FUNCTIONAL DIAGRAM	16
FIGURE 2: PIN ASSIGNMENT (TOP VIEW)	18
FIGURE 3: SLEEP MODE APPLICATION VIA UART	29
FIGURE 4: SLEEP MODE APPLICATION WITH USB REMOTE WAKEUP	30
FIGURE 5: SLEEP MODE APPLICATION WITH RI	31
FIGURE 6: SLEEP MODE APPLICATION WITHOUT SUSPEND FUNCTION	31
FIGURE 7: POWER SUPPLY LIMITS DURING BURST TRANSMISSION	33
FIGURE 8: STAR STRUCTURE OF THE POWER SUPPLY	34
FIGURE 9: REFERENCE CIRCUIT OF POWER SUPPLY	34
FIGURE 10: TURN ON THE MODULE USING DRIVING CIRCUIT	35
FIGURE 11: TURN ON THE MODULE USING KEYSTROKE	36
FIGURE 12: TIMING OF TURNING ON MODULE	
FIGURE 13: TIMING OF TURNING OFF MODULE	37
FIGURE 14: REFERENCE CIRCUIT OF RESET_N BY USING DRIVING CIRCUIT	38
FIGURE 15: REFERENCE CIRCUIT OF RESET_N BY USING BUTTON	38
FIGURE 16: TIMING OF RESETTING MODULE	39
FIGURE 17: REFERENCE CIRCUIT OF USIM CARD INTERFACE WITH AN 8-PIN USIM CARD	
CONNECTOR	40
FIGURE 18: REFERENCE CIRCUIT OF USIM CARD INTERFACE WITH A 6-PIN USIM CARD CONNEC	TOR
	40
FIGURE 19: REFERENCE CIRCUIT OF USB APPLICATION	
FIGURE 20: REFERENCE CIRCUIT WITH TRANSLATOR CHIP	
FIGURE 21: REFERENCE CIRCUIT WITH TRANSISTOR CIRCUIT	
FIGURE 22: PRIMARY MODE TIMING	
FIGURE 23: AUXILIARY MODE TIMING	
FIGURE 24: REFERENCE CIRCUIT OF PCM APPLICATION WITH AUDIO CODEC	47
FIGURE 25: REFERENCE CIRCUIT OF THE NETWORK INDICATOR	50
FIGURE 26: REFERENCE CIRCUITS OF STATUS	
FIGURE 27: SIMPLIFIED BLOCK DIAGRAM FOR ETHERNET APPLICATION	52
FIGURE 28: REFERENCE CIRCUIT OF SGMII INTERFACE WITH PHY AR8033 APPLICATION	53
FIGURE 29: REFERENCE CIRCUIT OF WIRELESS CONNECTIVITY INTERFACES WITH FC20 MODUL	_E
FIGURE 30: REFERENCE CIRCUIT OF USB_BOOT INTERFACE	
FIGURE 31: REFERENCE CIRCUIT OF RF ANTENNA INTERFACE	61
FIGURE 32: MICROSTRIP LINE DESIGN ON A 2-LAYER PCB	
FIGURE 33: COPLANAR WAVEGUIDE LINE DESIGN ON A 2-LAYER PCB	62
FIGURE 34: COPLANAR WAVEGUIDE LINE DESIGN ON A 4-LAYER PCB (LAYER 3 AS REFERENCE	
GROUND)	63
FIGURE 35: COPLANAR WAVEGUIDE LINE DESIGN ON A 4-LAYER PCB (LAYER 4 AS REFERENCE	
GROUND)	
FIGURE 36: REFERENCE CIRCUIT OF GNSS ANTENNA	64



FIGURE 37: DIMENSIONS OF THE UF.L-R-SMT CONNECTOR (UNIT: MM)	. 66
FIGURE 38: MECHANICALS OF UF.L-LP CONNECTORS	. 66
FIGURE 39: SPACE FACTOR OF MATED CONNECTOR (UNIT: MM)	. 67
FIGURE 40: MODULE TOP AND SIDE DIMENSIONS	. 81
FIGURE 41: MODULE BOTTOM DIMENSIONS (BOTTOM VIEW)	. 82
FIGURE 42: RECOMMENDED FOOTPRINT (TOP VIEW)	. 83
FIGURE 43: TOP VIEW OF THE MODULE	. 84
FIGURE 44: BOTTOM VIEW OF THE MODULE	. 84
FIGURE 45: REFLOW SOLDERING THERMAL PROFILE	. 86
FIGURE 46: TARE AND REEL SPECIFICATIONS	07



## 1 Introduction

This document defines the EC21 module and describes its air interface and hardware interface which are connected with your application.

This document can help you quickly understand module interface specifications, electrical and mechanical details, as well as other related information of EC21 module. Associated with application note and user guide, you can use EC21 module to design and set up mobile applications easily.



## 1.1. Safety Information

The following safety precautions must be observed during all phases of the operation, such as usage, service or repair of any cellular terminal or mobile incorporating EC21 module. Manufacturers of the cellular terminal should send the following safety information to users and operating personnel, and incorporate these guidelines into all manuals supplied with the product. If not so, Quectel assumes no liability for the customer's failure to comply with these precautions.



Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) causes distraction and can lead to an accident. You must comply with laws and regulations restricting the use of wireless devices while driving.



Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it is switched off. The operation of wireless appliances in an aircraft is forbidden, so as to prevent interference with communication systems. Consult the airline staff about the use of wireless devices on boarding the aircraft, if your device offers an Airplane Mode which must be enabled prior to boarding an aircraft.



Switch off your wireless device when in hospitals, clinics or other health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.



Cellular terminals or mobiles operating over radio frequency signal and cellular network cannot be guaranteed to connect in all conditions, for example no mobile fee or with an invalid USIM/SIM card. While you are in this condition and need emergent help, please remember using emergency call. In order to make or receive a call, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength.



Your cellular terminal or mobile contains a transmitter and receiver. When it is ON, it receives and transmits radio frequency energy. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.



In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other cellular terminals. Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust or metal powders, etc.



# **2** Product Concept

## 2.1. General Description

EC21 is a series of LTE-FDD/LTE-TDD/WCDMA/GSM wireless communication module with receive diversity. It provides data connectivity on LTE-FDD, LTE-TDD, DC-HSPA+, HSPA+, HSDPA, HSUPA, WCDMA, EDGE and GPRS networks. It also provides GNSS<sup>1)</sup> and voice functionality<sup>2)</sup> for your specific applications. EC21 contains ten variants: EC21-E, EC21-A, EC21-V, EC21-AUT, EC21-AU, EC21-AUV, EC21-AUTL, EC21-J, EC21-CT and EC21-KL. You can choose a dedicated type based on the region or operator. The following table shows the frequency bands of EC21 series module.

**Table 1: Frequency Bands of EC21 Series Module** 

Modules <sup>2)</sup>	LTE Bands	3G Bands	GSM	Rx- diversity	GNSS <sup>1)</sup>
EC21-E	FDD: B1/B3/B5/B7/B8/B20	WCDMA: B1/B5/B8	900/1800	Υ	
EC21-A	FDD: B2/B4/B12	WCDMA: B2/B4/B5	N	Υ	GPS, GLONASS,
EC21-V	FDD: B4/B13	N	N	Υ	BeiDou/
EC21-AUT	FDD: B1/B3/B5/B7/B28	WCDMA: B1/B5	N	Υ	Compass, Galileo,
EC21-AU <sup>3)</sup>	FDD: B1/B2/B3/B4/B5/B7/B8/ B28 TDD: B40	WCDMA: B1/B2/B5/B8	850/900/ 1800/1900	Υ	QZSS
EC21-AUV	FDD: B1/B3/B5/B8/B28	B1/B5/B8	N	Υ	N
EC21-AUTL	FDD: B3/B7/B28	N	N	Υ	N
EC21-J	FDD: B1/B3/B8/B18/B19/B26	N	N	Υ	N
EC21-CT	FDD: B1/B3/B5	N	N	N	N
EC21-KL	FDD: B1/B3/B5/B7/B8	N	N	Υ	N



## **NOTES**

- 1. 1) GNSS function is optional.
- 2. <sup>2)</sup> EC21 series module (EC21-E, EC21-A, EC21-V, EC21-AUT, EC21-AU, EC21-AUV, EC21-AUTL, EC21-J, EC21-CT and EC21-KL) includes **Data-only** and **Telematics** versions. **Data-only** version does not support voice function, while **Telematics** version supports it.
- 3. 3) B2 band on EC21-AU module does not support Rx-diversity.
- 4. Y = supported (including LTE and WCDMA). N = Not supported.

With a compact profile of  $32.0 \text{mm} \times 29.0 \text{mm} \times 2.4 \text{mm}$ , EC21 can meet almost all requirements for M2M applications such as automotive, metering, tracking system, security, router, wireless POS, mobile computing device, PDA phone, tablet PC, etc.

EC21 is an SMD type module which can be embedded into applications through its 144-pin pads, including 80 LCC signal pads and 64 other pads.

## 2.2. Key Features

The following table describes the detailed features of EC21 module.

Table 2: EC21 Key Features of EC21 Module

Features	Details				
Power Supply	Supply voltage: 3.3V~4.3V Typical supply voltage: 3.8V				
	Class 4 (33dBm±2dB) for GSM850				
	Class 4 (33dBm±2dB) for GSM900				
	Class 1 (30dBm±2dB) for DCS1800				
	Class 1 (30dBm±2dB) for PCS1900				
	Class E2 (27dBm±3dB) for GSM850 8-PSK				
Transmitting Power	Class E2 (27dBm±3dB) for GSM900 8-PSK				
	Class E2 (26dBm±3dB) for DCS1800 8-PSK				
	Class E2 (26dBm±3dB) for PCS1900 8-PSK				
	Class 3 (24dBm+1/-3dB) for WCDMA bands				
	Class 3 (23dBm±2dB) for LTE-FDD bands				
	Class 3 (23dBm±2dB) for LTE-TDD bands				
	Support up to non-CA CAT1				
LTE Features	Support 1.4 to 20MHz RF bandwidth				
LIE Fealules	Support MIMO in DL direction				
	FDD: Max 5Mbps (UL), 10Mbps (DL)				



	TDD: Max 3.1Mbps (UL), 8.96Mbps (DL)
	Support 3GPP R8 DC-HSPA+
MODMA Factoria	Support 16-QAM, 64-QAM and QPSK modulation
WCDMA Features	3GPP R6 CAT6 HSUPA: Max 5.76Mbps (UL)
	3GPP R8 CAT24 DC-HSPA+: Max 42Mbps (DL)
	R99:
	CSD: 9.6kbps, 14.4kbps
	GPRS:
	Support GPRS multi-slot class 12 (12 by default)
	Coding scheme: CS-1, CS-2, CS-3 and CS-4
GSM Features	Maximum of four Rx time slots per frame
GSIVI Features	EDGE:
	Support EDGE multi-slot class 12 (12 by default)
	Support GMSK and 8-PSK for different MCS (Modulation and Coding
	Scheme)
	Downlink coding schemes: CS 1-4 and MCS 1-9
	Uplink coding schemes: CS 1-4 and MCS 1-9
	Support TCP/UDP/PPP/FTP/HTTP/NTP/PING/QMI/HTTPS*/SMTP*/
	MMS*/FTPS*/SSL* protocols
Internet Protocol Features	Support PAP (Password Authentication Protocol) and CHAP (Challenge
	Handshake Authentication Protocol) protocols which are usually used for
	PPP connections
	Text and PDU mode
SMS	Point to point MO and MT
	SMS cell broadcast
	SMS storage: ME by default
USIM Interface	Support USIM/SIM card: 1.8V, 3.0V
	Support one digital audio interface: PCM interface
	GSM: HR/FR/EFR/AMR/AMR-WB
Audio Features	WCDMA: AMR/AMR-WB
	LTE: AMR/AMR-WB
	Support echo cancellation and noise suppression
	Used for audio function with external codec
	Support 8-bit A-law*, µ-law* and 16-bit linear data formats
PCM Interface	Support long frame synchronization and short frame synchronization
	Support master and slave modes, but must be the master in long frame
	synchronization
	Compliant with USB 2.0 specification (slave only); the data transfer rate
	can reach up to 480Mbps
USB Interface	Used for AT command communication, data transmission, GNSS NMEA
	output, software debugging, firmware upgrade and voice over USB*
	Support USB drivers for Windows XP, Windows Vista, Windows 7,



	Windows 8/8.1, Window 10, Linux 2.6 or later, Android 4.0/4.2/4.4/5.0/5.1/6.0			
UART Interface	Main UART: Used for AT command communication and data transmission Baud rate reach up to 3000000bps, 115200bps by default Support RTS and CTS hardware flow control Debug UART: Used for Linux console, log output 115200bps baud rate			
SGMII Interface	Support 10/100/1000Mbps Ethernet connectivity			
Wireless Connectivity Interfaces	Support a low-power SDIO 3.0 interface for WLAN and UART/PCM interface for Bluetooth*			
Rx-diversity	Support LTE/WCDMA Rx-diversity			
GNSS Features	Gen8C Lite of Qualcomm Protocol: NMEA 0183			
AT Commands	Compliant with 3GPP TS 27.007, 27.005 and Quectel enhanced AT commands			
Network Indication	Two pins including NET_MODE and NET_STATUS to indicate network connectivity status			
Antenna Interface	Including main antenna interface (ANT_MAIN), Rx-diversity antenna interface (ANT_DIV) and GNSS antenna interface (ANT_GNSS)			
Physical Characteristics	Size: (32.0±0.15) × (29.0±0.15) × (2.4±0.2)mm Weight: approx. 4.9g			
Temperature Range	Operation temperature range: -35°C ~ +75°C <sup>1)</sup> Extended temperature range: -40°C ~ +85°C <sup>2)</sup>			
Firmware Upgrade	USB interface and DFOTA*			
RoHS	All hardware components are fully compliant with EU RoHS directive			

## **NOTES**

- 1. 1) Within operating temperature range, the module is 3GPP compliant.
- 2. <sup>2)</sup> Within extended temperature range, the module remains the ability to establish and maintain a voice, SMS, data transmission, emergency call, etc. There is no unrecoverable malfunction. There are also no effects on radio spectrum and no harm to radio network. Only one or more parameters like P<sub>out</sub> might reduce in their value and exceed the specified tolerances. When the temperature returns to normal operating temperature levels, the module will meet 3GPP specifications again.
- 3. "\*" means under development.



## 2.3. Functional Diagram

The following figure shows a block diagram of EC21 and illustrates the major functional parts.

- Power management
- Baseband
- DDR+NAND flash
- Radio frequency
- Peripheral interfaces

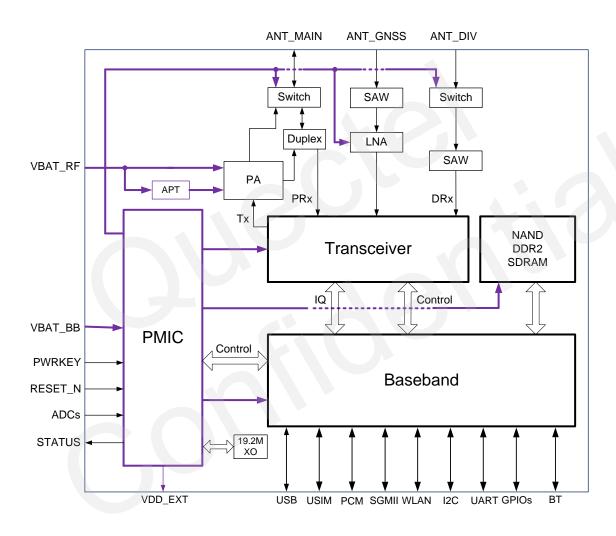


Figure 1: Functional Diagram

#### 2.4. Evaluation Board

In order to help you develop applications with EC21, Quectel supplies an evaluation board (EVB), USB data cable, earphone, antenna and other peripherals to control or test the module.



# **3** Application Interfaces

## 3.1. General Description

EC21 is equipped with 80-pin SMT pads plus 64-pin ground pads and reserved pads that can be connected to cellular application platform. Sub-interfaces included in these pads are described in detail in the following chapters:

- Power supply
- USIM interface
- USB interface
- UART interfaces
- PCM interface
- ADC interface
- Status indication
- SGMII interface
- Wireless connectivity interfaces
- USB\_BOOT interface



## 3.2. Pin Assignment

The following figure shows the pin assignment of EC21 module.

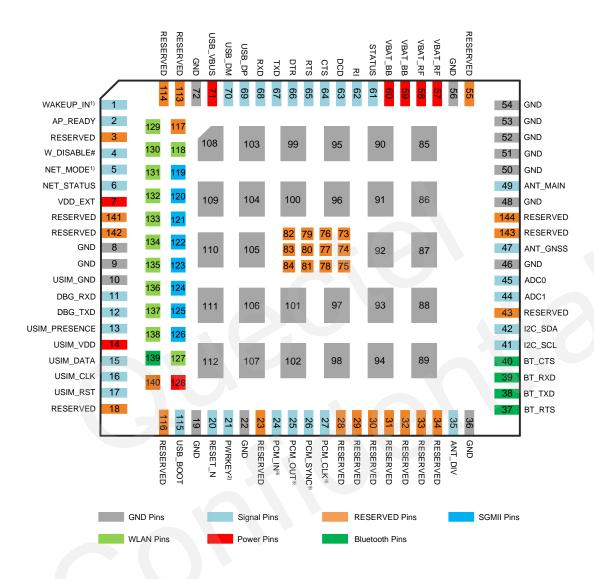


Figure 2: Pin Assignment (Top View)

#### **NOTES**

- 1. 1) means that these pins cannot be pulled up before startup.
- 2. <sup>2)</sup> PWRKEY output voltage is 0.8V because of the diode drop in the Qualcomm chipset.
- 3. Pads 119~126 are SGMII function pins.
- 4. Pads 37~40, 118, 127 and 129~139 are wireless connectivity interfaces, among which pads 127 and 129~138 are WLAN function pins, and others are Bluetooth (BT) function pins. BT function is under development.
- 5. Pads 24~27 are multiplexing pins used for audio design on EC21 module and BT function on FC20



module.

- 6. Keep all RESERVED pins and unused pins unconnected.
- 7. GND pads 85~112 should be connected to ground in the design, and RESERVED pads 73~84 should not be designed in schematic and PCB decal.
- 8. "\*" means these interface functions are only supported on **Telematics** version.

## 3.3. Pin Description

The following tables show the pin definition of EC21 module.

Table 3: I/O Parameters Definition

Туре	Description
Ю	Bidirectional
DI	Digital input
DO	Digital output
PI	Power input
РО	Power output
Al	Analog input
AO	Analog output
OD	Open drain

**Table 4: Pin Description** 

Power Supply						
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment	
VBAT_BB	59, 60	PI	Power supply for module baseband part	Vmax=4.3V Vmin=3.3V Vnorm=3.8V	It must be able to provide sufficient current up to 0.8A.	
VBAT_RF	57, 58	PI	Power supply for module RF part	Vmax=4.3V Vmin=3.3V Vnorm=3.8V	It must be able to provide sufficient current up to 1.8A in a burst transmission.	



VDD_EXT	7	РО	Provide 1.8V for external circuit	Vnorm=1.8V I <sub>O</sub> max=50mA	Power supply for external GPIO's pull up circuits.
GND	8, 9, 19, 22, 36, 46, 48, 50~54, 56, 72, 85~112		Ground		
Turn on/off					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
PWRKEY	21	DI	Turn on/off the module	V <sub>IH</sub> max=2.1V V <sub>IH</sub> min=1.3V V <sub>IL</sub> max=0.5V	The output voltage is 0.8V because of the diode drop in the Qualcomm chipset.
RESET_N	20	DI	Reset the module	V <sub>IH</sub> max=2.1V V <sub>IH</sub> min=1.3V V <sub>IL</sub> max=0.5V	
Status Indic	ation				
Pin Name	Pin No.	1/0	Description	DC Characteristics	Comment
STATUS	61	OD	Indicate the module operating status	The drive current should be less than 0.9mA.	Require external pull-up. If unused, keep it open.
NET_MODE	5	DO	Indicate the module network registration mode	V <sub>OH</sub> min=1.35V V <sub>OL</sub> max=0.45V	1.8V power domain.  Cannot be pulled up before startup.  If unused, keep it open.
NET_ STATUS	6	DO	Indicate the module network activity status	V <sub>OH</sub> min=1.35V V <sub>OL</sub> max=0.45V	1.8V power domain. If unused, keep it open.
USB Interfac	ce				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USB_VBUS	71	PI	USB detection	Vnorm=5.0V	
USB_DP	69	Ю	USB differential data bus	Compliant with USB 2.0 standard specification.	Require differential impedance of 90 ohm.
USB_DM	70	Ю	USB differential data bus	Compliant with USB 2.0 standard specification.	Require differential impedance of 90 ohm.



USIM Interfac	е				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USIM_GND	10		Specified ground for USIM card		
USIM_VDD	14	PO	Power supply for USIM card	For 1.8V USIM: Vmax=1.9V Vmin=1.7V  For 3.0V USIM: Vmax=3.05V Vmin=2.7V Iomax=50mA	Either 1.8V or 3.0V is supported by the module automatically.
USIM_DATA	15	Ю	Data signal of USIM card	For 1.8V USIM:  V <sub>IL</sub> max=0.6V  V <sub>IH</sub> min=1.2V  V <sub>OL</sub> max=0.45V  V <sub>OH</sub> min=1.35V  For 3.0V USIM:  V <sub>IL</sub> max=1.0V  V <sub>IH</sub> min=1.95V  V <sub>OL</sub> max=0.45V  V <sub>OH</sub> min=2.55V	
USIM_CLK	16	DO	Clock signal of USIM card	For 1.8V USIM:  V <sub>OL</sub> max=0.45V  V <sub>OH</sub> min=1.35V  For 3.0V USIM:  V <sub>OL</sub> max=0.45V  V <sub>OH</sub> min=2.55V	
USIM_RST	17	DO	Reset signal of USIM card	For 1.8V USIM:  V <sub>OL</sub> max=0.45V  V <sub>OH</sub> min=1.35V  For 3.0V USIM:  V <sub>OL</sub> max=0.45V  V <sub>OH</sub> min=2.55V	
USIM_ PRESENCE	13	DI	USIM card insertion detection	V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. If unused, keep it oper



UART Interfa	ice				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
RI	62	DO	Ring indicator	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain. If unused, keep it open.
DCD	63	DO	Data carrier detection	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain. If unused, keep it open.
CTS	64	DO	Clear to send	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain. If unused, keep it open.
RTS	65	DI	Request to send	$V_{IL}$ min=-0.3V $V_{IL}$ max=0.6V $V_{IH}$ min=1.2V $V_{IH}$ max=2.0V	1.8V power domain. If unused, keep it open.
DTR	66	DI	Data terminal ready, sleep mode control	$V_{IL}$ min=-0.3V $V_{IL}$ max=0.6V $V_{IH}$ min=1.2V $V_{IH}$ max=2.0V	1.8V power domain. Pull-up by default. Low level wakes up the module. If unused, keep it open.
TXD	67	DO	Transmit data	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain. If unused, keep it open.
RXD	68	DI	Receive data	V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. If unused, keep it open.
Debug UART	Interface				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
DBG_TXD	12	DO	Transmit data	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain. If unused, keep it open.
DBG_RXD	11	DI	Receive data	$V_{IL}$ min=-0.3V $V_{IL}$ max=0.6V $V_{IH}$ min=1.2V $V_{IH}$ max=2.0V	1.8V power domain. If unused, keep it open.
ADC Interfac	е				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
ADC0	45	AI	General purpose analog to digital converter	Voltage range: 0.3V to VBAT_BB	If unused, keep it open.
ADC1	44	AI	General purpose analog to digital converter	Voltage range: 0.3V to VBAT_BB	If unused, keep it open.



PCM Interfac	е				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
PCM_IN	24	DI	PCM data input	V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. If unused, keep it open.
PCM_OUT	25	DO	PCM data output	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain.  If unused, keep it open.
PCM_SYNC	26	Ю	PCM data frame synchronization signal	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. In master mode, it is an output signal. In slave mode, it is an input signal. If unused, keep it open.
PCM_CLK	27	Ю	PCM clock	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. In master mode, it is an output signal. In slave mode, it is an input signal. If unused, keep it open.
I2C Interface					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
I2C_SCL	41	OD	I2C serial clock. Used for external codec		External pull-up resistor is required.  1.8V only.  If unused, keep it open.
I2C_SDA	42	OD	I2C serial data. Used for external codec		External pull-up resistor is required.  1.8V only.  If unused, keep it open.
SGMII Interfa	ce				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
EPHY_RST_I	N 119	DO	Ethernet PHY reset	For 1.8V:  V <sub>OL</sub> max=0.45V  V <sub>OH</sub> min=1.4V  For 2.85V:  V <sub>OL</sub> max=0.35V  V <sub>OH</sub> min=2.14V	1.8V/2.85V power domain. If unused, keep it open.



EPHY_INT_N	120	DI	Ethernet PHY interrupt	$V_{IL}$ min=-0.3V $V_{IL}$ max=0.6V $V_{IH}$ min=1.2V $V_{IH}$ max=2.0V	1.8V power domain. If unused, keep it open.
SGMII_ MDATA	121	Ю	SGMII MDIO (Management Data Input/Output) data	For 1.8V: $V_{OL}$ max=0.45V $V_{OH}$ min=1.4V $V_{IL}$ max=0.58V $V_{IH}$ min=1.27V For 2.85V: $V_{OL}$ max=0.35V $V_{OH}$ min=2.14V $V_{IL}$ max=0.71V $V_{IH}$ min=1.78V	1.8V/2.85V power domain. If unused, keep it open.
SGMII_ MCLK	122	DO	SGMII MDIO (Management Data Input/Output) clock	For 1.8V:  V <sub>OL</sub> max=0.45V  V <sub>OH</sub> min=1.4V  For 2.85V:  V <sub>OL</sub> max=0.35V  V <sub>OH</sub> min=2.14V	1.8V/2.85V power domain. If unused, keep it open.
USIM2_VDD	128	РО	SGMII MDIO pull-up power source		Configurable power source.  1.8V/2.85V power domain.  External pull-up for SGMII MDIO pins.  If unused, keep it open.
SGMII_TX_M	123	АО	SGMII transmission - minus		If unused, keep it open.
SGMII_TX_P	124	АО	SGMII transmission - plus		If unused, keep it open.
SGMII_RX_P	125	AI	SGMII receiving - plus		If unused, keep it open.
SGMII_RX_M	126	AI	SGMII receiving - minus		If unused, keep it open.
Wireless Conn	ectivity Int	erface	es		
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
SDC1_ DATA3	129	Ю	SDIO data bus D3	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain. If unused, keep it



				V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	open.
SDC1_ DATA2	130	Ю	SDIO data bus D2	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. If unused, keep it open.
SDC1_ DATA1	131	Ю	SDIO data bus D1	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. If unused, keep it open.
SDC1_ DATA0	132	Ю	SDIO data bus D1	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. If unused, keep it open.
SDC1_CLK	133	DO	SDIO clock	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain.  If unused, keep it open.
SDC1_CMD	134	DO	SDIO command	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain. If unused, keep it open.
PM_ENABLE	127	DO	External power control	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain.  If unused, keep it open.
WAKE_ON_ WIRELESS	135	DI	Wake up the host (EC21 module) by FC20 module.	VILmin=-0.3V VILmax=0.6V VIHmin=1.2V VIHmax=2.0V	1.8V power domain. Active low. If unused, keep it open.
WLAN_EN	136	DO	WLAN function control via FC20 module	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	<ul><li>1.8V power domain.</li><li>Active high.</li><li>If unused, keep it open.</li></ul>
COEX_UART_ RX	137	DI	LTE/WLAN coexistence signal	V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. If unused, keep it open.



COEX_UART_ TX	138	DO	LTE/WLAN coexistence signal	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain.  If unused, keep it open.
WLAN_SLP_ CLK	118	DO	WLAN sleep clock		If unused, keep it open.
BT_RTS*	37	DI	BT UART request to send	V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. If unused, keep it open.
BT_TXD*	38	DO	BT UART transmit data	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain. If unused, keep it open.
BT_RXD*	39	DI	BT UART receive data	V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. If unused, keep it open.
BT_CTS*	40	DO	BT UART clear to send	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain. If unused, keep it open.
BT_EN*	139	DO	BT function control via FC20 module	V <sub>OL</sub> max=0.45V V <sub>OH</sub> min=1.35V	1.8V power domain. If unused, keep it open.
RF Interface					
Pin Name	Pin No.	1/0	Description	DC Characteristics	Comment
ANT_DIV	35	AI	Diversity antenna pad	50 ohm impedance	If unused, keep it open.
ANT_MAIN	49	Ю	Main antenna pad	50 ohm impedance	
ANT_GNSS	47	AI	GNSS antenna pad	50 ohm impedance	If unused, keep it open.
GPIO Pins					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
					1.8V power domain.
WAKEUP_IN	1	DI	Sleep mode control	$V_{IL}$ min=-0.3V $V_{IL}$ max=0.6V $V_{IH}$ min=1.2V $V_{IH}$ max=2.0V	Cannot be pulled up before startup.  Low level wakes up the module.  If unused, keep it open.



			control	V <sub>IL</sub> max=0.6V	Pull-up by default.
				V <sub>IH</sub> min=1.2V	In low voltage level,
				V <sub>IH</sub> max=2.0V	module can enter into
					airplane mode.
					If unused, keep it
					open.
			Application	V <sub>IL</sub> min=-0.3V	1.8V power domain.
AP_READY	2	DI	processor sleep	V <sub>IL</sub> max=0.6V	If unused, keep it
7 tt _, t_, t_	_		state detection V <sub>IH</sub> min=1.2V		open.
				V <sub>IH</sub> max=2.0V	- P
Other Interfac	ce Pins				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USB_BOOT	115	DI	Force the module to boot from USB port.	V <sub>IL</sub> min=-0.3V V <sub>IL</sub> max=0.6V V <sub>IH</sub> min=1.2V V <sub>IH</sub> max=2.0V	1.8V power domain. If unused, keep it open.
RESERVED F	Pins				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
	3, 18, 23,				
	28~34,				
	43, 55,				Voor those nine
RESERVED	73~84,		Reserved		Keep these pins unconnected.
	113, 114,				unconnected.
	116, 117,				
	140~144				

## NOTES

- 1. "\*" means under development.
- 2. Pads 24~27 are multiplexing pins used for audio design on EC21 module and BT function on FC20 module.



## 3.4. Operating Modes

The table below briefly summarizes the various operating modes referred in the following chapters.

**Table 5: Overview of Operating Modes** 

Mode	Details				
Normal Operation	Idle	Software is active. The module has been registered on the network, and it is ready to send and receive data.			
	Talk/Data	Network connection is ongoing. In this mode, the power consumption is decided by network setting and data transfer rate.			
Minimum Functionality Mode	AT+CFUN command can set the module to a minimum functionality mode without removing the power supply. In this case, both RF function and USIM card will be invalid.				
Airplane Mode	<b>AT+CFUN</b> command or W_DISABLE# pin can set the module to airplane mode. In this case, RF function will be invalid.				
Sleep Mode	In this mode, the current consumption of the module will be reduced to the minimal level. During this mode, the module can still receive paging message, SMS, voice call and TCP/UDP data from the network normally.				
Power down Mode	active. The se	the power management unit shuts down the power supply. Software is not erial interface is not accessible. Operating voltage (connected to VBAT_RF B) remains applied.			

## 3.5. Power Saving

## 3.5.1. Sleep Mode

EC21 is able to reduce its current consumption to a minimum value during the sleep mode. The following section describes power saving procedure of EC21 module.

#### 3.5.1.1. UART Application

If the host communicates with module via UART interface, the following preconditions can let the module enter into sleep mode.

- Execute AT+QSCLK=1 command to enable sleep mode.
- Drive DTR to high level.



The following figure shows the connection between the module and the host.

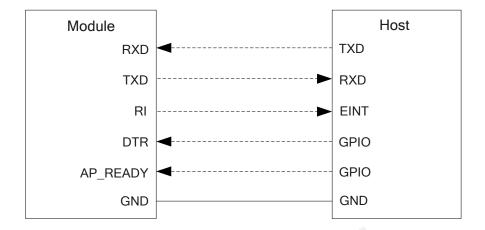


Figure 3: Sleep Mode Application via UART

- Driving the host DTR to low level will wake up the module.
- When EC21 has URC to report, RI signal will wake up the host. Refer to Chapter 3.16 for details about RI behavior.
- AP\_READY will detect the sleep state of the host (can be configured to high level or low level detection). Please refer to AT+QCFG="apready" command for details.

**NOTE** 

AT+QCFG="apready" command is under development.

#### 3.5.1.2. USB Application with USB Remote Wakeup Function

If the host supports USB suspend/resume and remote wakeup functions, the following three preconditions must be met to let the module enter into sleep mode.

- Execute AT+QSCLK=1 command to enable sleep mode.
- Ensure the DTR is held in high level or keep it open.
- The host's USB bus, which is connected with the module's USB interface, enters into suspended state.



The following figure shows the connection between the module and the host.

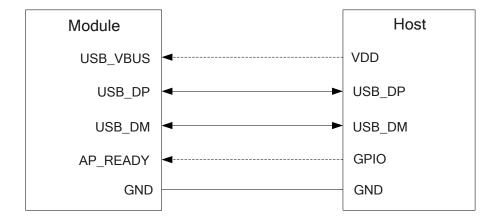


Figure 4: Sleep Mode Application with USB Remote Wakeup

- Sending data to EC21 through USB will wake up the module.
- When EC21 has URC to report, the module will send remote wake-up signals via USB bus so as to wake up the host.

### 3.5.1.3. USB Application with USB Suspend/Resume and RI Function

If the host supports USB suspend/resume, but does not support remote wake-up function, the RI signal is needed to wake up the host.

There are three preconditions to let the module enter into the sleep mode.

- Execute AT+QSCLK=1 command to enable sleep mode.
- Ensure the DTR is held in high level or keep it open.
- The host's USB bus, which is connected with the module's USB interface, enters into suspended state.



The following figure shows the connection between the module and the host.

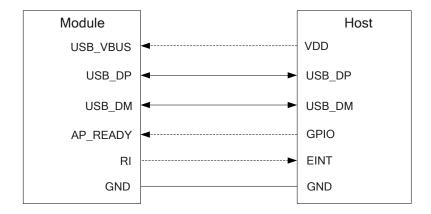


Figure 5: Sleep Mode Application with RI

- Sending data to EC21 through USB will wake up the module.
- When EC21 has URC to report, RI signal will wake up the host.

## 3.5.1.4. USB Application without USB Suspend Function

If the host does not support USB suspend function, you should disconnect USB\_VBUS with additional control circuit to let the module enter into sleep mode.

- Execute AT+QSCLK=1 command to enable sleep mode.
- Ensure the DTR is held in high level or keep it open.
- Disconnect USB VBUS.

The following figure shows the connection between the module and the host.

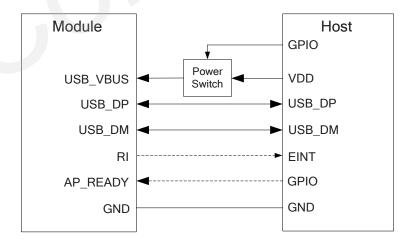


Figure 6: Sleep Mode Application without Suspend Function



Switching on the power switch to supply power to USB\_VBUS will wake up the module.

### **NOTE**

Please pay attention to the level match shown in dotted line between the module and the host. Refer to **document [1]** for more details about EC21 power management application.

## 3.5.2. Airplane Mode

When the module enters into airplane mode, the RF function does not work, and all AT commands correlative with RF function will be inaccessible. This mode can be set via the following ways.

#### Hardware:

The W\_DISABLE# pin is pulled up by default; driving it to low level will let the module enter into airplane mode.

#### Software:

AT+CFUN command provides the choice of the functionality level.

- AT+CFUN=0: Minimum functionality mode; both USIM and RF functions are disabled.
- AT+CFUN=1: Full functionality mode (by default).
- AT+CFUN=4: Airplane mode. RF function is disabled.

### **NOTES**

- 1. The W\_DISABLE# control function is disabled in firmware by default. It can be enabled by AT+QCFG="airplanecontrol" command. This command is under development.
- 2. The execution of AT+CFUN command will not affect GNSS function.

## 3.6. Power Supply

#### 3.6.1. Power Supply Pins

EC21 provides four VBAT pins for connection with the external power supply. There are two separate voltage domains for VBAT.

- Two VBAT\_RF pins for module RF part.
- Two VBAT BB pins for module baseband part.

The following table shows the details of VBAT pins and ground pins.



Table 6: VBAT and GND Pins

Pin Name	Pin No.	Description	Min.	Тур.	Max.	Unit
VBAT_RF	57, 58	Power supply for module RF part.	3.3	3.8	4.3	V
VBAT_BB	59, 60	Power supply for module baseband part.	3.3	3.8	4.3	V
GND	8, 9, 19, 22, 36, 46, 48, 50~54, 56, 72, 85~112	Ground	-	0	-	V

### 3.6.2. Decrease Voltage Drop

The power supply range of the module is from 3.3V to 4.3V. Please make sure that the input voltage will never drop below 3.3V. The following figure shows the voltage drop during burst transmission in 2G network. The voltage drop will be less in 3G and 4G networks.

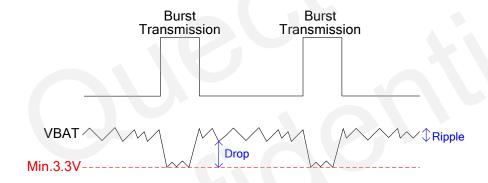


Figure 7: Power Supply Limits during Burst Transmission

To decrease voltage drop, a bypass capacitor of about 100µF with low ESR should be used, and a multi-layer ceramic chip (MLCC) capacitor array should also be used to provide the low ESR. The main power supply from an external application has to be a single voltage source and can be expanded to two sub paths with star structure. The width of VBAT\_BB trace should be no less than 1mm; and the width of VBAT\_RF trace should be no less than 2mm. In principle, the longer the VBAT trace is, the wider it will be.

Three ceramic capacitors (100nF, 33pF, 10pF) are recommended to be applied to the VBAT pins. These capacitors should be placed close to the VBAT pins. In addition, in order to get a stable power source, it is suggested that you should use a zener diode of which reverse zener voltage is 5.1V and dissipation power is more than 0.5W. The following figure shows the star structure of the power supply.



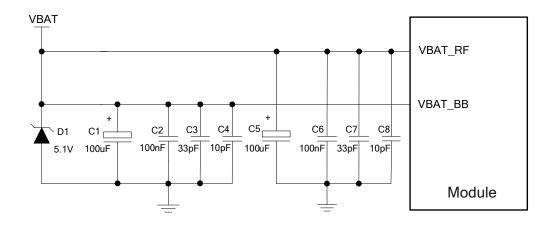


Figure 8: Star Structure of the Power Supply

## 3.6.3. Reference Design for Power Supply

Power design for the module is very important, as the performance of the module largely depends on the power source. The power supply is capable of providing sufficient current up to 2A at least. If the voltage drop between the input and output is not too high, it is suggested that you should use an LDO to supply power for the module. If there is a big voltage difference between the input source and the desired output (VBAT), a buck converter is preferred to be used as the power supply.

The following figure shows a reference design for +5V input power source. The typical output of the power supply is about 3.8V and the maximum load current is 3A.

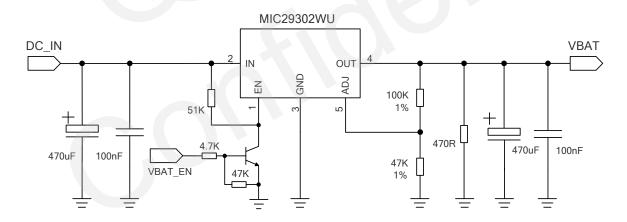


Figure 9: Reference Circuit of Power Supply

**NOTE** 

In order to avoid damaging internal flash, please do not switch off the power supply when the module works normally. Only after the module is shut down by PWRKEY or AT command, the power supply can be cut off.



## 3.6.4. Monitor the Power Supply

**AT+CBC** command can be used to monitor the VBAT\_BB voltage value. For more details, please refer to **document [2]**.

#### 3.7. Turn on and off Scenarios

## 3.7.1. Turn on Module Using the PWRKEY

The following table shows the pin definition of PWRKEY.

**Table 7: PWRKEY Pin Description** 

Pin Name	Pin No.	Description	DC Characteristics	Comment
			V <sub>IH</sub> max=2.1V	The output voltage is 0.8V
PWRKEY	21	Turn on/off the module	V <sub>IH</sub> min=1.3V	because of the diode drop in
			V <sub>IL</sub> max=0.5V	the Qualcomm chipset.

When EC21 is in power down mode, it can be turned on to normal mode by driving the PWRKEY pin to a low level for at least 100ms. It is recommended to use an open drain/collector driver to control the PWRKEY. After STATUS pin (require external pull-up) outputting a low level, PWRKEY pin can be released. A simple reference circuit is illustrated in the following figure.

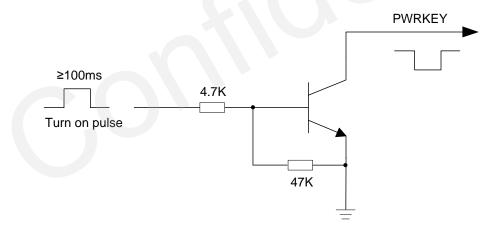


Figure 10: Turn on the Module Using Driving Circuit

The other way to control the PWRKEY is using a button directly. When pressing the key, electrostatic strike may generate from finger. Therefore, a TVS component is indispensable to be placed nearby the button for ESD protection. A reference circuit is shown in the following figure.



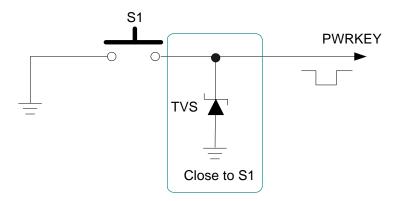


Figure 11: Turn on the Module Using Keystroke

The turn on scenario is illustrated in the following figure.

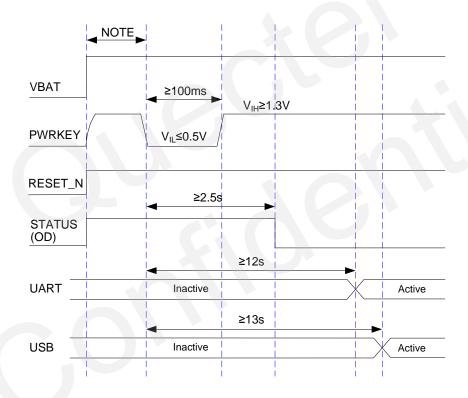


Figure 12: Timing of Turning on Module

NOTE

Please make sure that VBAT is stable before pulling down PWRKEY pin. The time between them is no less than 30ms.



#### 3.7.2. Turn off Module

The following procedures can be used to turn off the module:

- Normal power down procedure: Turn off the module using the PWRKEY pin.
- Normal power down procedure: Turn off the module using AT+QPOWD command.

#### 3.7.2.1. Turn off Module Using the PWRKEY Pin

Driving the PWRKEY pin to a low level voltage for at least 650ms, the module will execute power-down procedure after the PWRKEY is released. The power-down scenario is illustrated in the following figure.

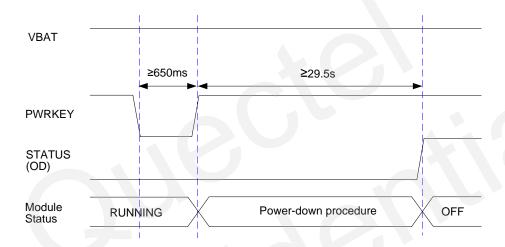


Figure 13: Timing of Turning off Module

#### 3.7.2.2. Turn off Module Using AT Command

It is also a safe way to use **AT+QPOWD** command to turn off the module, which is similar to turning off the module via PWRKEY pin.

Please refer to **document [2]** for details about **AT+QPOWD** command.

# NOTE

In order to avoid damaging internal flash, please do not switch off the power supply when the module works normally. Only after the module is shut down by PWRKEY or AT command, the power supply can be cut off.



#### 3.8. Reset the Module

The RESET\_N pin can be used to reset the module. The module can be reset by driving RESET\_N to a low level voltage for time between 150ms and 460ms.

Table 8: RESET\_N Pin Description

Pin Name	Pin No.	Description	DC Characteristics	Comment
			V <sub>IH</sub> max=2.1V	
RESET_N	20	Reset the module	V <sub>IH</sub> min=1.3V	
			V <sub>IL</sub> max=0.5V	

The recommended circuit is similar to the PWRKEY control circuit. An open drain/collector driver or button can be used to control the RESET\_N.

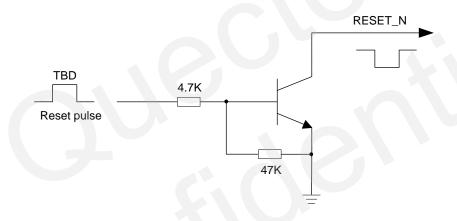


Figure 14: Reference Circuit of RESET\_N by Using Driving Circuit

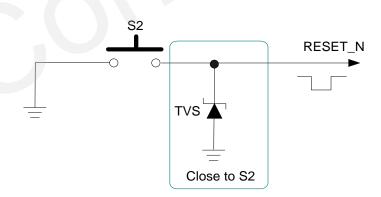


Figure 15: Reference Circuit of RESET\_N by Using Button



The reset scenario is illustrated in the following figure.

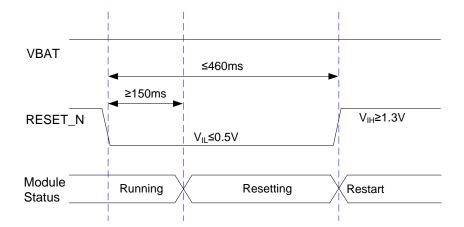


Figure 16: Timing of Resetting Module

#### **NOTES**

- 1. Use RESET\_N only when turning off the module by AT+QPOWD command and PWRKEY pin failed.
- 2. Ensure that there is no large capacitance on PWRKEY and RESET\_N pins.

# 3.9. USIM Card Interface

The USIM card interface circuitry meets ETSI and IMT-2000 SIM interface requirements. Both 1.8V and 3.0V USIM cards are supported.

Table 9: Pin Definition of the USIM Card Interface

Pin Name	Pin No.	1/0	Description	Comment
USIM_VDD	14	РО	Power supply for USIM card	Either 1.8V or 3.0V is supported by the module automatically.
USIM_DATA	15	Ю	Data signal of USIM card	
USIM_CLK	16	DO	Clock signal of USIM card	
USIM_RST	17	DO	Reset signal of USIM card	
USIM_ PRESENCE	13	DI	USIM card insertion detection	
USIM_GND	10		Specified ground for USIM card	



EC21 supports USIM card hot-plug via the USIM\_PRESENCE pin. The function supports low level and high level detections, and is disabled by default. Please refer to **document [2]** about **AT+QSIMDET** command for details.

The following figure shows a reference design for USIM card interface with an 8-pin USIM card connector.

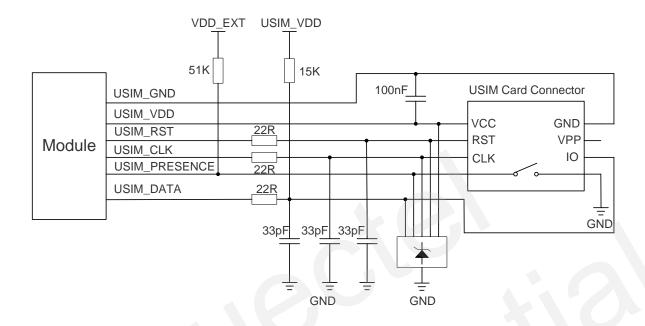


Figure 17: Reference Circuit of USIM Card Interface with an 8-Pin USIM Card Connector

If USIM card detection function is not needed, please keep USIM\_PRESENCE unconnected. A reference circuit for USIM card interface with a 6-pin USIM card connector is illustrated in the following figure.

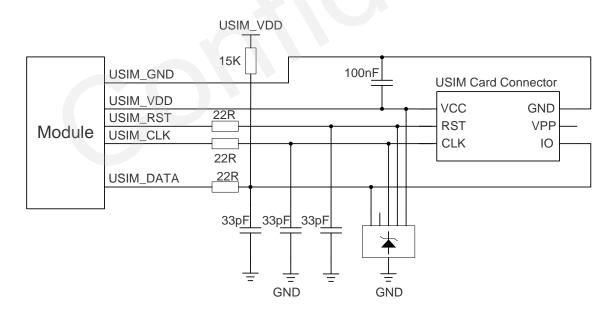


Figure 18: Reference Circuit of USIM Card Interface with a 6-Pin USIM Card Connector



In order to enhance the reliability and availability of the USIM card in your application, please follow the criteria below in USIM circuit design:

- Keep layout of USIM card as close to the module as possible. Keep the trace length as less than 200mm as possible.
- Keep USIM card signals away from RF and VBAT traces.
- Assure the ground between the module and the USIM card connector short and wide. Keep the trace
  width of ground and USIM\_VDD no less than 0.5mm to maintain the same electric potential.
- To avoid cross-talk between USIM\_DATA and USIM\_CLK, keep them away from each other and shield them with surrounded ground.
- In order to offer good ESD protection, it is recommended to add a TVS diode array whose parasitic capacitance should not be more than 50pF. The 22 ohm resistors should be added in series between the module and the USIM card so as to suppress EMI spurious transmission and enhance ESD protection. The 33pF capacitors are used for filtering interference of GSM900. Please note that the USIM peripheral circuit should be close to the USIM card connector.
- The pull-up resistor on USIM\_DATA line can improve anti-jamming capability when long layout trace and sensitive occasion are applied, and should be placed close to the USIM card connector.

# 3.10. USB Interface

EC21 contains one integrated Universal Serial Bus (USB) transceiver which complies with the USB 2.0 specification and supports high-speed (480Mbps) and full-speed (12Mbps) modes. The USB interface is used for AT command communication, data transmission, GNSS NMEA sentences output, software debugging, firmware upgrade and voice over USB\*. The following table shows the pin definition of USB interface.

**Table 10: Pin Description of USB Interface** 

Pin Name	Pin No.	1/0	Description	Comment
USB Signal I	Part			
USB_DP	69	Ю	USB differential data bus (positive)	Require differential impedance of 90Ω
USB_DM	70	Ю	USB differential data bus (minus)	Require differential impedance of 90Ω
USB_VBUS	71	PI	Used for detecting the USB connection	Typical 5.0V
GND	72		Ground	

For more details about the USB 2.0 specifications, please visit <a href="http://www.usb.org/home">http://www.usb.org/home</a>.



The USB interface is recommended to be reserved for firmware upgrade in your design. The following figure shows a reference circuit of USB interface.

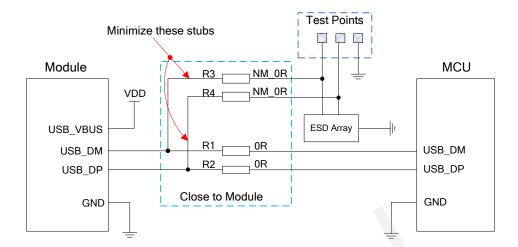


Figure 19: Reference Circuit of USB Application

In order to ensure the integrity of USB data line signal, components R1, R2, R3 and R4 must be placed close to the module, and also these resistors should be placed close to each other. The extra stubs of trace must be as short as possible.

In order to ensure the USB interface design corresponding with the USB 2.0 specification, please comply with the following principles:

- It is important to route the USB signal traces as differential pairs with total grounding. The impedance of USB differential trace is 90 ohm.
- Do not route signal traces under crystals, oscillators, magnetic devices or RF signal traces. It is important to route the USB differential traces in inner-layer with ground shielding on not only upper and lower layers but also right and left sides.
- Pay attention to the influence of junction capacitance of ESD protection components on USB data lines. Typically, the capacitance value should be less than 2pF.
- Keep the ESD protection components to the USB connector as close as possible.

#### **NOTES**

- 1. EC21 module can only be used as a slave device.
- 2. "\*" means under development.



# 3.11. UART Interfaces

The module provides two UART interfaces: the main UART interface and the debug UART interface. The following shows their features.

- The main UART interface supports 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600 and 3000000bps baud rates, and the default is 115200bps. The interface is used for data transmission and AT command communication.
- The debug UART interface supports 115200bps baud rate. It is used for Linux console and log output.

The following tables show the pin definition of the main UART interface.

**Table 11: Pin Definition of the Main UART Interface** 

Pin Name	Pin No.	I/O	Description	Comment
RI	62	DO	Ring indicator	
DCD	63	DO	Data carrier detection	_ *\
CTS	64	DO	Clear to send	
RTS	65	DI	Request to send	1.8V power domain
DTR	66	DI	Sleep mode control	
TXD	67	DO	Transmit data	
RXD	68	DI	Receive data	

Table 12: Pin Definition of the Debug UART Interface

Pin Name	Pin No.	I/O	Description	Comment
DBG_TXD	12	DO	Transmit data	1.8V power domain
DBG_RXD	11	DI	Receive data	1.0 v power domain



The logic levels are described in the following table.

Table 13: Logic Levels of Digital I/O

Parameter	Min.	Max.	Unit
$V_{IL}$	-0.3	0.6	V
V <sub>IH</sub>	1.2	2.0	V
V <sub>OL</sub>	0	0.45	V
V <sub>OH</sub>	1.35	1.8	V

The module provides 1.8V UART interface. A level translator should be used if your application is equipped with a 3.3V UART interface. A level translator TXS0108EPWR provided by *Texas Instrument* is recommended. The following figure shows a reference design.

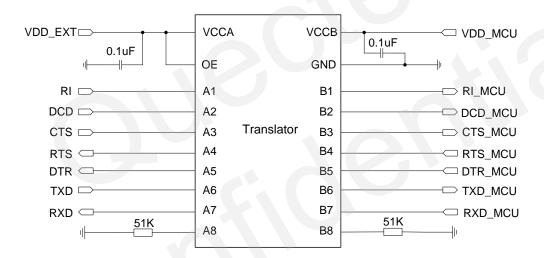


Figure 20: Reference Circuit with Translator Chip

Please visit <a href="http://www.ti.com">http://www.ti.com</a> for more information.

Another example with transistor translation circuit is shown as below. The circuit design of dotted line section can refer to the design of solid line section, in terms of both module input and output circuit designs; but please pay attention to the direction of connection.



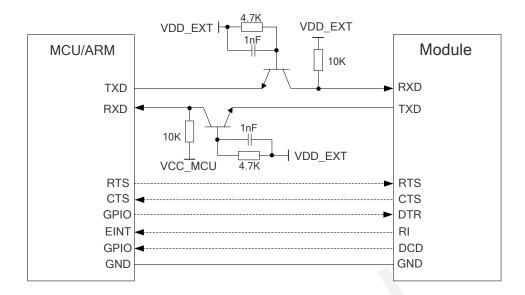


Figure 21: Reference Circuit with Transistor Circuit

NOTE

Transistor circuit solution is not suitable for applications with high baud rates exceeding 460Kbps.

# 3.12. PCM and I2C Interfaces

EC21 provides one Pulse Code Modulation (PCM) digital interface for audio design, which supports the following modes:

- Primary mode (short frame synchronization, works as both master and slave)
- Auxiliary mode (long frame synchronization, works as master only)

In primary mode, the data is sampled on the falling edge of the PCM\_CLK and transmitted on the rising edge. The PCM\_SYNC falling edge represents the MSB. In this mode, PCM\_CLK supports 128, 256, 512, 1024 and 2048kHz for different speech codecs.

In auxiliary mode, the data is also sampled on the falling edge of the PCM\_CLK and transmitted on the rising edge. But the PCM\_SYNC rising edge represents the MSB. In this mode, PCM interface operates with a 128kHz PCM\_CLK and an 8kHz, 50% duty cycle PCM\_SYNC only.

EC21 supports 8-bit A-law\* and  $\mu$ -law\*, and also 16-bit linear data formats. The following figures show the primary mode's timing relationship with 8kHz PCM\_SYNC and 2048kHz PCM\_CLK, as well as the auxiliary mode's timing relationship with 8kHz PCM\_SYNC and 128kHz PCM\_CLK.



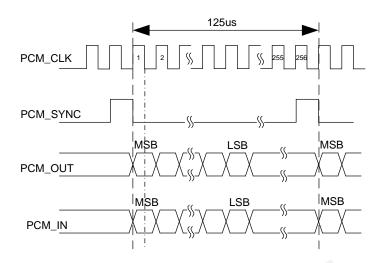


Figure 22: Primary Mode Timing

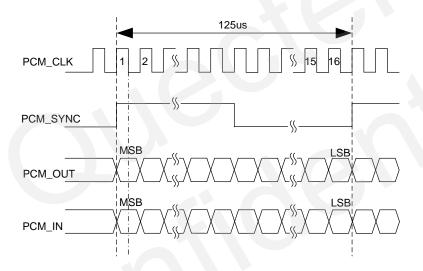


Figure 23: Auxiliary Mode Timing

The following table shows the pin definition of PCM and I2C interfaces which can be applied on audio codec design.

Table 14: Pin Definition of PCM and I2C Interfaces

Pin Name	Pin No.	I/O	Description	Comment
PCM_IN	24	DI	PCM data input	1.8V power domain
PCM_OUT	25	DO	PCM data output	1.8V power domain
PCM_SYNC	26	Ю	PCM data frame sync signal	1.8V power domain



PCM_CLK	27	Ю	PCM data bit clock	1.8V power domain
I2C_SCL	41	OD	I2C serial clock	Require external pull-up to 1.8V
I2C_SDA	42	OD	I2C serial data	Require external pull-up to 1.8V

Clock and mode can be configured by AT command, and the default configuration is master mode using short frame synchronization format with 2048kHz PCM\_CLK and 8kHz PCM\_SYNC. Please refer to **document [2]** about AT+QDAI command for details.

The following figure shows a reference design of PCM interface with external codec IC.

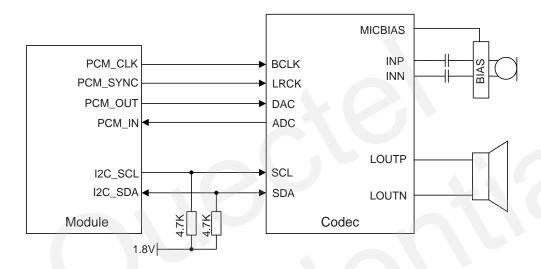


Figure 24: Reference Circuit of PCM Application with Audio Codec

# **NOTES**

- 1. "\*" means under development.
- 2. It is recommended to reserve RC (R=22 ohm, C=22pF) circuit on the PCM lines, especially for PCM\_CLK.
- 3. EC21 works as a master device pertaining to I2C interface.



# 3.13. ADC Function

The module provides two analog-to-digital converters (ADC). **AT+QADC=0** command can be used to read the voltage value on ADC0 pin. **AT+QADC=1** command can be used to read the voltage value on ADC1 pin. For more details about these AT commands, please refer to **document [2]**.

In order to improve the accuracy of ADC, the trace of ADC should be surrounded by ground.

Table 15: Pin Definition of the ADC

Pin Name	Pin No.	Description
ADC0	45	General purpose analog to digital converter
ADC1	44	General purpose analog to digital converter

The following table describes the characteristic of the ADC function.

**Table 16: Characteristic of the ADC** 

Parameter	Min.	Тур.	Max.	Unit
ADC0 Voltage Range	0.3		VBAT_BB	V
ADC1 Voltage Range	0.3		VBAT_BB	V
ADC Resolution			15	bits

#### **NOTES**

- ADC input voltage must not exceed VBAT\_BB.
- 2. It is prohibited to supply any voltage to ADC pins when VBAT is removed.
- 3. It is recommended to use resistor divider circuit for ADC application.



# 3.14. Network Status Indication

The network indication pins can be used to drive network status indication LEDs. The module provides two pins which are NET\_MODE and NET\_STATUS. The following tables describe the pin definition and logic level changes in different network status.

Table 17: Pin Definition of Network Connection Status/Activity Indicator

Pin Name	Pin No.	I/O	Description	Comment
NET_MODE <sup>1)</sup>	5	DO	Indicate the module's network registration status	1.9\/ nower demain
NET_STATUS	6	DO	Indicate the module's network activity status	1.8V power domain



<sup>1)</sup> means that this pin cannot be pulled up before startup.

Table 18: Working State of Network Connection Status/Activity Indicator

Pin Name	Logic Level Changes	Network Status
NET MODE	Always High	Registered on LTE network
NET_MODE	Always Low	Others
	Flicker slowly (200ms High/1800ms Low)	Network searching
NET STATUS	Flicker slowly (1800ms High/200ms Low)	Idle
NET_STATUS	Flicker quickly (125ms High/125ms Low)	Data transfer is ongoing
	Always High	Voice calling

A reference circuit is shown in the following figure.



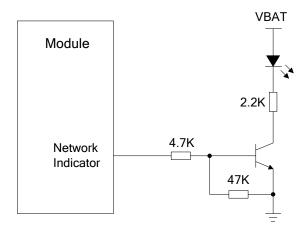


Figure 25: Reference Circuit of the Network Indicator

#### **3.15. STATUS**

The STATUS pin is an open drain output for indicating the module's operation status. You can connect it to a GPIO of DTE with a pull up resistor, or as the LED indication circuit shown below. When the module is turned on normally, the STATUS will present the low state. Otherwise, the STATUS will present high-impedance state.

**Table 19: Pin Definition of STATUS** 

Pin Name	Pin No.	I/O	Description	Comment
STATUS	61	OD	Indicate the module's operation status	Require external pull-up

The following figure shows different circuit designs of STATUS, and you can choose either one according to your application demands.

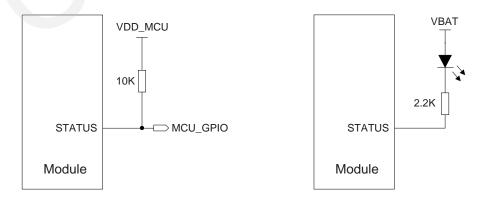


Figure 26: Reference Circuits of STATUS



#### 3.16. Behavior of the RI

AT+QCFG="risignaltype", "physical" command can be used to configure RI behavior.

No matter on which port URC is presented, URC will trigger the behavior of RI pin.

# NOTE

URC can be output from UART port, USB AT port and USB modem port by **AT+QURCCFG** command. The default port is USB AT port.

In addition, RI behavior can be configured flexibly. The default behavior of the RI is shown as below.

Table 20: Behavior of the RI

State	Response	
Idle	RI keeps in high level	
URC	RI outputs 120ms low pulse when new URC returns	

The RI behavior can be changed by AT+QCFG="urc/ri/ring" command. Please refer to document [2] for details.

# 3.17. SGMII Interface

EC21 includes an integrated Ethernet MAC with an SGMII interface and two management interfaces, key features of the SGMII interface are shown below:

- IEEE802.3 compliance
- Full duplex at 1000Mbps
- Half/full duplex for 10/100Mbps
- Support VLAN tagging
- Support IEEE1588 and Precision Time Protocol (PTP)
- Can be used to connect to external Ethernet PHY like AR8033, or to an external switch
- Management interfaces support dual voltage 1.8V/2.85V

The following table shows the pin definition of SGMII interface.



Table 21: Pin Definition of the SGMII Interface

Pin Name	Pin No.	I/O	Description	Comment
Control Sign	al Part			
EPHY_RST_	N 119	DO	Ethernet PHY reset	1.8V/2.85V power domain
EPHY_INT_N	l 120	DI	Ethernet PHY interrupt	1.8V power domain
SGMII_MDAT	TA 121	Ю	SGMII MDIO (Management Data Input/Output) data	1.8V/2.85V power domain
SGMII_MCLK	( 122	DO	SGMII MDIO (Management Data Input/Output) clock	1.8V/2.85V power domain
USIM2_VDD	128	РО	SGMII MDIO pull-up power source	Configurable power source.  1.8V/2.85V power domain.  External pull-up power source for SGMII MDIO pins.
SGMII Signa	l Part			
SGMII_TX_M	1 123	АО	SGMII transmission-minus	Connect with a 0.1uF capacitor, close to the PHY side.
SGMII_TX_P	124	AO	SGMII transmission-plus	Connect with a 0.1uF capacitor, close to the PHY side.
SGMII_RX_P	125	Al	SGMII receiving-plus	Connect with a 0.1uF capacitor, close to EC21 module.
SGMII_RX_M	1 126	Al	SGMII receiving-minus	Connect with a 0.1uF capacitor, close to EC21 module.

The following figure shows the simplified block diagram for Ethernet application.

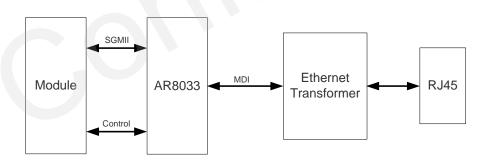


Figure 27: Simplified Block Diagram for Ethernet Application

The following figure shows a reference design of SGMII interface with PHY AR8033 application.



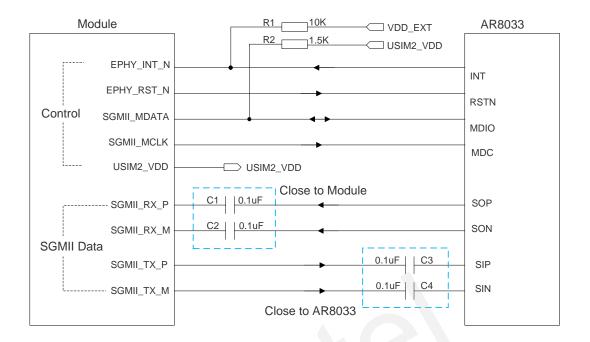


Figure 28: Reference Circuit of SGMII Interface with PHY AR8033 Application

In order to enhance the reliability and availability in your application, please follow the criteria below in the Ethernet PHY circuit design:

- Keep SGMII data and control signals away from RF and VBAT trace.
- Keep the maximum trace length less than 10inch and keep skew on the differential pairs less than 20mil.
- The differential impedance of SGMII data trace is 100ohm±10%.
- To minimize crosstalk, the distance between separate adjacent pairs that are on the same layer must be equal to or larger than 40mil.

NOTE

For more information about SGMII application, please refer to document [5] and document [7].



# 3.18. Wireless Connectivity Interfaces

EC21 supports a low-power SDIO 3.0 interface for WLAN and a UART/PCM interface for BT.

The following table shows the pin definition of wireless connectivity interfaces.

**Table 22: Pin Definition of Wireless Connectivity Interfaces** 

Pin Name	Pin No.	I/O	Description	Comment
WLAN Part				
SDC1_DATA3	129	Ю	SDIO data bus D3	1.8V power domain
SDC1_DATA2	130	Ю	SDIO data bus D2	1.8V power domain
SDC1_DATA1	131	Ю	SDIO data bus D1	1.8V power domain
SDC1_DATA0	132	Ю	SDIO data bus D0	1.8V power domain
SDC1_CLK	133	DO	SDIO clock	1.8V power domain
SDC1_CMD	134	Ю	SDIO command	1.8V power domain
WLAN_EN	136	DO	WLAN function control via FC20 module. Active high.	1.8V power domain
Coexistence and	Control Pa	art		
PM_ENABLE	127	DO	External power control	1.8V power domain
WAKE_ON_ WIRELESS	135	DI	Wake up the host (EC21 module) by FC20 module.	1.8V power domain
COEX_UART_RX	137	DI	LTE/WLAN&BT coexistence signal	1.8V power domain
COEX_UART_TX	138	DO	LTE/WLAN&BT coexistence signal	1.8V power domain
WLAN_SLP_CLK	118	DO	WLAN sleep clock	
BT Part*				
BT_RTS*	37	DI	BT UART request to send	1.8V power domain
BT_TXD*	38	DO	BT UART transmit data	1.8V power domain
BT_RXD*	39	DI	BT UART receive data	1.8V power domain



BT_CTS*	40	DO	BT UART clear to send	1.8V power domain
PCM_IN <sup>1)</sup>	24	DI	PCM data input	1.8V power domain
PCM_OUT <sup>1)</sup>	25	DO	PCM data output	1.8V power domain
PCM_SYNC <sup>1)</sup>	26	Ю	PCM data frame sync signal	1.8V power domain
PCM_CLK <sup>1)</sup>	27	Ю	PCM data bit clock	1.8V power domain
BT_EN*	139	DO	WLAN function control via FC20 module. Active high.	1.8V power domain

# **NOTES**

- 1. "\*" means under development.
- 2. <sup>1)</sup> Pads 24~27 are multiplexing pins used for audio design on EC21 module and BT function on FC20 module.

The following figure shows a reference design of wireless connectivity interfaces with Quectel FC20 module.

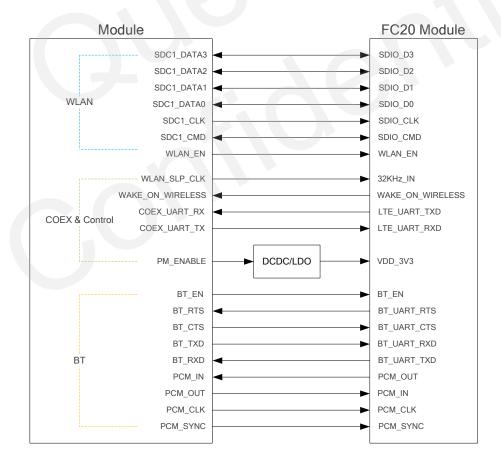


Figure 29: Reference Circuit of Wireless Connectivity Interfaces with FC20 Module



#### **NOTES**

- 1. FC20 module can only be used as a slave device,
- When BT function is enabled on EC21 module, PCM\_SYNC and PCM\_CLK pins are only used to output signals.
- 3. For more information about wireless connectivity interfaces, please refer to document [5].

#### 3.18.1. WLAN Interface

EC21 provides a low power SDIO 3.0 interface and control interface for WLAN design.

SDIO interface supports the following modes:

- Single data rate (SDR) mode (up to 200MHz)
- Double data rate (DDR) mode (up to 52MHz)

As SDIO signals are very high-speed, in order to ensure the SDIO interface design corresponds with the SDIO 3.0 specification, please comply with the following principles:

- It is important to route the SDIO signal traces with total grounding. The impedance of SDIO signal trace is 50 ohm (±10%).
- Protect other sensitive signals/circuits (RF, analog signals, etc.) from SDIO corruption and protect SDIO signals from noisy signals (clocks, DCDCs, etc.).
- It is recommended to keep matching length between CLK and DATA/CMD less than 1mm and total routing length less than 50mm.
- Keep termination resistors within 15~24 ohm on clock lines near the module and keep the route distance from the module clock pins to termination resistors less than 5mm.
- Make sure the adjacent trace spacing is 2x line width and bus capacitance is less than 15pF.

#### 3.18.2. BT Interface\*

EC21 supports a dedicated UART interface and a PCM interface for BT function application.

Further information about BT interface will be added in future version of this document.

**NOTE** 

"\*" means under development.



# 3.19. USB\_BOOT Interface

EC21 provides a USB\_BOOT pin. During development or factory production, USB\_BOOT pin can force the module to boot from USB port for firmware upgrade.

Table 23: Pin Definition of USB\_BOOT Interface

Pin Name	Pin No.	I/O	Description	Comment
USB_BOOT	115	DI	Force the module to boot from USB port	<ul><li>1.8V power domain.</li><li>Active high.</li><li>If unused, keep it open.</li></ul>

The following figure shows a reference circuit of USB\_BOOT interface.

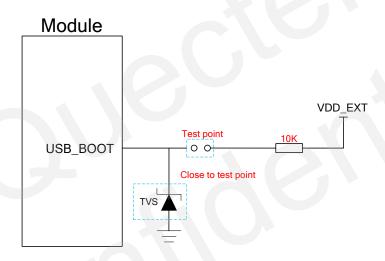


Figure 30: Reference Circuit of USB\_BOOT Interface



# **4** GNSS Receiver

# 4.1. General Description

EC21 includes a fully integrated global navigation satellite system solution that supports Gen8C-Lite of Qualcomm (GPS, GLONASS, BeiDou, Galileo and QZSS).

EC21 supports standard NMEA-0183 protocol, and outputs NMEA sentences at 1Hz data update rate via USB interface by default.

By default, EC21 GNSS engine is switched off. It has to be switched on via AT command. For more details about GNSS engine technology and configurations, please refer to **document [3]**.

# 4.2. GNSS Performance

The following table shows the GNSS performance of EC21.

**Table 24: GNSS Performance** 

Description	Conditions	Тур.	Unit
Cold start	Autonomous	-146	dBm
Reacquisition	Autonomous	-157	dBm
Tracking	Autonomous	-157	dBm
Cold start @open sky	Autonomous	35	S
	XTRA enabled	18	S
Warm start	Autonomous	26	S
@open sky	XTRA enabled	2.2	S
	Cold start  Reacquisition  Tracking  Cold start @open sky  Warm start	Cold start Autonomous  Reacquisition Autonomous  Tracking Autonomous  Cold start @open sky XTRA enabled  Warm start @open sky  Autonomous  Autonomous	Cold start Autonomous -146  Reacquisition Autonomous -157  Tracking Autonomous -157  Cold start Autonomous 35  @open sky XTRA enabled 18  Warm start Autonomous 26



	Hot start	Autonomous	2.5	S
	@open sky	XTRA enabled	1.8	S
Accuracy (GNSS)	CEP-50	Autonomous @open sky	<1.5	m

# **NOTES**

- 1. Tracking sensitivity: the lowest GNSS signal value at the antenna port on which the module can keep on positioning for 3 minutes.
- 2. Reacquisition sensitivity: the lowest GNSS signal value at the antenna port on which the module can fix position again within 3 minutes after loss of lock.
- 3. Cold start sensitivity: the lowest GNSS signal value at the antenna port on which the module fixes position within 3 minutes after executing cold start command.

# 4.3. Layout Guidelines

The following layout guidelines should be taken into account in your design.

- Maximize the distance among GNSS antenna, main antenna and the Rx-diversity antenna.
- Digital circuits such as USIM card, USB interface, camera module, display connector and SD card should be kept away from the antennas.
- Use ground vias around the GNSS trace and sensitive analog signal traces to provide coplanar isolation and protection.
- Keep 50 ohm characteristic impedance for the ANT\_GNSS trace.

Please refer to *Chapter 5* for GNSS antenna reference design and antenna consideration.



# **5** Antenna Interfaces

EC21 antenna interfaces include a main antenna interface, an Rx-diversity antenna interface which is used to resist the fall of signals caused by high speed movement and multipath effect, and a GNSS antenna interface. The antenna interfaces have an impedance of 50 ohm.

# 5.1. Main/Rx-diversity Antenna Interface

# 5.1.1. Pin Definition

The pin definition of main antenna and Rx-diversity antenna interfaces is shown below.

Table 25: Pin Definition of the RF Antenna

Pin Name	Pin No.	I/O	Description	Comment
ANT_MAIN	49	Ю	Main antenna pad	50 ohm impedance
ANT_DIV	35	AI	Receive diversity antenna pad	50 ohm impedance

# 5.1.2. Operating Frequency

**Table 26: Module Operating Frequencies** 

3GPP Band	Transmit	Receive	Unit
B1	1920~1980	2110~2170	MHz
B2 (1900)	1850~1910	1930~1990	MHz
B3 (1800)	1710~1785	1805~1880	MHz
B4	1710~1755	2110~2155	MHz
B5 (850)	824~849	869~894	MHz
B7	2500~2570	2620~2690	MHz
B8 (900)	880~915	925~960	MHz



B12	699~716	729~746	MHz
B13	777~787	746~756	MHz
B18	815~830	860~875	MHz
B19	830~845	875~890	MHz
B20	832~862	791~821	MHz
B26	814~849	859~894	MHz
B28	703~748	758~803	MHz
B40	2300~2400	2300~2400	MHz

# 5.1.3. Reference Design of RF Antenna Interface

A reference design of ANT\_MAIN and ANT\_DIV antenna pads is shown as below. It should reserve a  $\pi$ -type matching circuit for better RF performance. The capacitors are not mounted by default.

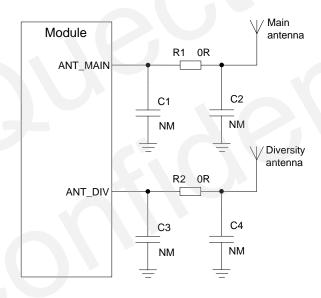


Figure 31: Reference Circuit of RF Antenna Interface

# **NOTES**

- 1. Keep a proper distance between the main antenna and the Rx-diversity antenna to improve the receiving sensitivity.
- 2. ANT\_DIV function is enabled by default.
- 3. Place the  $\pi$ -type matching components (R1, C1, C2, R2, C3, C4) as close to the antenna as possible.



# 5.1.4. Reference Design of RF Layout

For user's PCB, the characteristic impedance of all RF traces should be controlled as 50 ohm. The impedance of the RF traces is usually determined by the trace width (W), the materials' dielectric constant, the distance between signal layer and reference ground (H), and the clearance between RF trace and ground (S). Microstrip line or coplanar waveguide line is typically used in RF layout for characteristic impedance control. The following are reference designs of microstrip line or coplanar waveguide line with different PCB structures

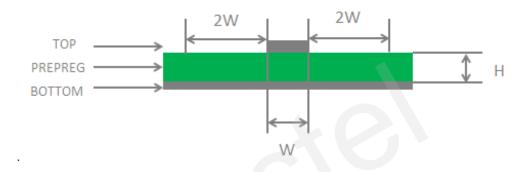


Figure 32: Microstrip Line Design on a 2-layer PCB

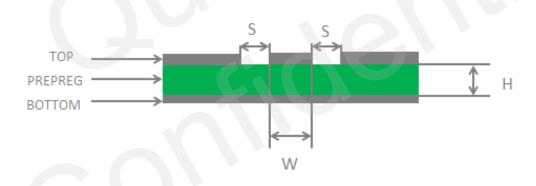


Figure 33: Coplanar Waveguide Line Design on a 2-layer PCB



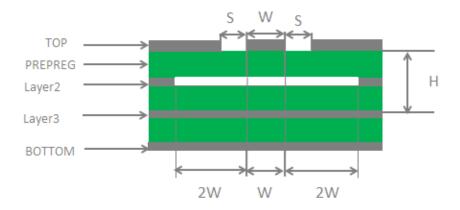


Figure 34: Coplanar Waveguide Line Design on a 4-layer PCB (Layer 3 as Reference Ground)

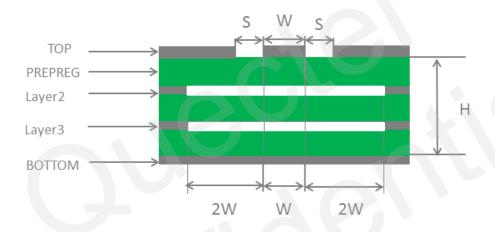


Figure 35: Coplanar Waveguide Line Design on a 4-layer PCB (Layer 4 as Reference Ground)

In order to ensure RF performance and reliability, the following principles should be complied with in RF layout design:

- Use impedance simulation tool to control the characteristic impedance of RF traces as 50 ohm.
- The GND pins adjacent to RF pins should not be hot welded, and should be fully connected to ground.
- The distance between the RF pins and the RF connector should be as short as possible, and all the right angle traces should be changed to curved ones.
- There should be clearance area under the signal pin of the antenna connector or solder joint.
- The reference ground of RF traces should be complete. Meanwhile, adding some ground vias around RF traces and the reference ground could help to improve RF performance. The distance between the ground vias and RF traces should be no less than two times the width of RF signal traces (2\*W).

For more details about RF layout, please refer to document [6].



# 5.2. GNSS Antenna Interface

The following tables show the pin definition and frequency specification of GNSS antenna interface.

Table 27: Pin Definition of GNSS Antenna Interface

Pin Name	Pin No.	I/O	Description	Comment
ANT_GNSS	47	Al	GNSS antenna	50 ohm impedance

**Table 28: GNSS Frequency** 

Туре	Frequency	Unit
GPS/Galileo/QZSS	1575.42±1.023	MHz
GLONASS	1597.5~1605.8	MHz
BeiDou	1561.098±2.046	MHz

A reference design of GNSS antenna is shown as below.

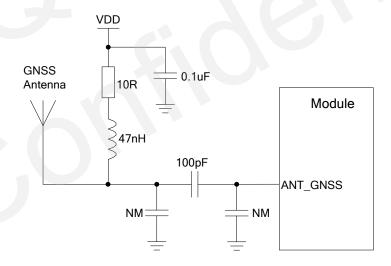


Figure 36: Reference Circuit of GNSS Antenna

# **NOTES**

- 1. An external LDO can be selected to supply power according to the active antenna requirement.
- 2. If the module is designed with a passive antenna, then the VDD circuit is not needed.



# 5.3. Antenna Installation

# 5.3.1. Antenna Requirement

The following table shows the requirements on main antenna, Rx-diversity antenna and GNSS antenna.

**Table 29: Antenna Requirements** 

Туре	Requirements
	Frequency range: 1561~1615MHz
	Polarization: RHCP or linear
	VSWR: <2 (Typ.)
GNSS	Passive antenna gain: >0dBi
GNSS	Active antenna noise figure: <1.5dB
	Active antenna gain: >-2dBi
	Active antenna embedded LNA gain: 20dB (Typ.)
	Active antenna total gain: >18dBi (Typ.)
	VSWR: ≤2
	Gain (dBi): 1
	Max input power (W): 50
	Input Impedance (ohm): 50
	Polarization type: Vertical
GSM/WCDMA/LTE	Cable insertion loss: <1dB
GSIVI/WCDIVIA/LTE	(GSM850, GSM900, WCDMA B5/B8,
	LTE B5/B8/B12/B13/B18/B19/B20/B26/B28)
	Cable insertion loss: <1.5dB
	(GSM1800, GSM1900, WCDMA B1/B2/B4, LTE B1/B2/B3/B4)
	Cable insertion loss <2dB
	(LTE B7/B40)



#### 5.3.2. Recommended RF Connector for Antenna Installation

If RF connector is used for antenna connection, it is recommended to use UF.L-R-SMT connector provided by HIROSE.

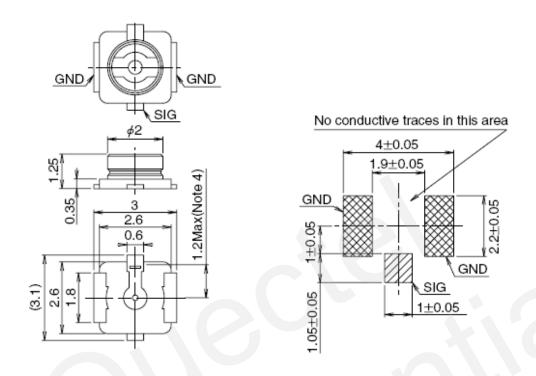


Figure 37: Dimensions of the UF.L-R-SMT Connector (Unit: mm)

U.FL-LP serial connectors listed in the following figure can be used to match the UF.L-R-SMT.

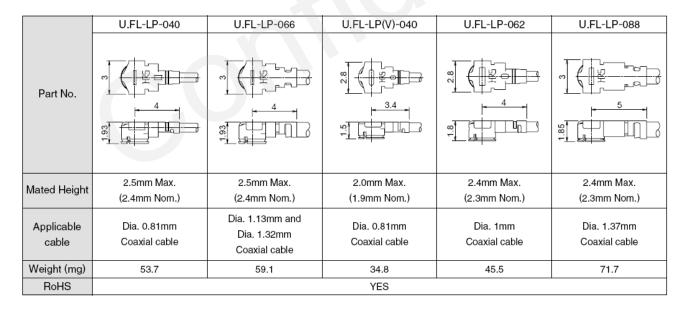


Figure 38: Mechanicals of UF.L-LP Connectors



The following figure describes the space factor of mated connector.

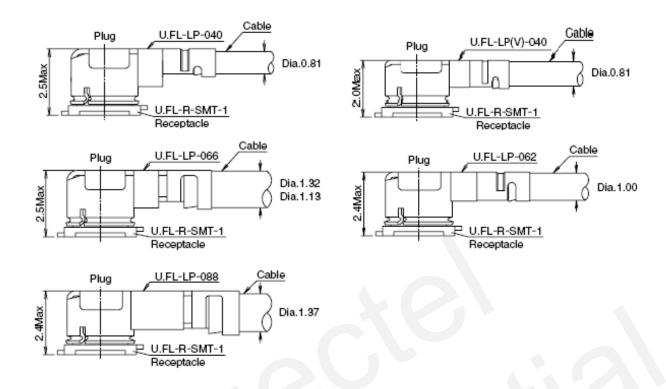


Figure 39: Space Factor of Mated Connector (Unit: mm)

For more details, please visit http://www.hirose.com.



# **6** Electrical, Reliability and Radio Characteristics

# 6.1. Absolute Maximum Ratings

Absolute maximum ratings for power supply and voltage on digital and analog pins of the module are listed in the following table.

**Table 30: Absolute Maximum Ratings** 

Parameter	Min.	Max.	Unit
VBAT_RF/VBAT_BB	-0.3	4.7	V
USB_VBUS	-0.3	5.5	V
Peak Current of VBAT_BB	0	0.8	A
Peak Current of VBAT_RF	0	1.8	A
Voltage at Digital Pins	-0.3	2.3	V
Voltage at ADC0	0	VBAT_BB	V
Voltage at ADC1	0	VBAT_BB	V

# 6.2. Power Supply Ratings

**Table 31: Power Supply Ratings** 

Parameter	Description	Conditions	Min.	Тур.	Max.	Unit
VBAT	VBAT_BB and	Voltage must stay within the	3.3	3.8	4.3	V



	VBAT_RF	min/max values, including voltage drop, ripple and spikes.				
	Voltage drop during burst transmission	Maximum power control level on GSM900			400	mV
I <sub>VBAT</sub>	Peak supply current (during transmission slot)	Maximum power control level on GSM900		1.8	2.0	А
USB_VBUS	USB detection		3.0	5.0	5.25	V

# 6.3. Operating Temperature

The operating temperature is listed in the following table.

**Table 32: Operating Temperature** 

Parameter	Min.	Тур.	Max.	Unit
Operation Temperature Range <sup>1)</sup>	-35	+25	+75	°C
Extended Temperature Range <sup>2)</sup>	-40		+85	°C

# **NOTES**

- 1. 1) Within operation temperature range, the module is 3GPP compliant.
- 2. <sup>2)</sup> Within extended temperature range, the module remains the ability to establish and maintain a voice, SMS, data transmission, emergency call, etc. There is no unrecoverable malfunction. There are also no effects on radio spectrum and no harm to radio network. Only one or more parameters like P<sub>out</sub> might reduce in their value and exceed the specified tolerances. When the temperature returns to the normal operating temperature levels, the module will meet 3GPP specifications again.



# **6.4. Current Consumption**

The values of current consumption are shown below.

**Table 33: EC21-A Current Consumption** 

Parameter	Description	Conditions	Тур.	Unit
	OFF state	Power down	20	uA
		AT+CFUN=0 (USB disconnected)	1.0	mA
		WCDMA PF=64 (USB disconnected)	2.8	mA
	Sleep state	WCDMA PF=128 (USB disconnected)	2.3	mA
		LTE-FDD PF=64 (USB disconnected)	2.2	mA
		LTE-FDD PF=128 (USB disconnected)	2.2	mA
		WCDMA PF=64 (USB disconnected)	21.6	mA
	Idle state (GNSS OFF)	WCDMA PF=64 (USB connected)	31.6	mA
		LTE-FDD PF=64 (USB disconnected)	23.7	mA
$I_{VBAT}$		LTE-FDD PF=64 (USB connected)	36.5	mA
IVBAI	WCDMA data transfer (GNSS OFF)	WCDMA B2 HSDPA @22.09dBm	542.0	mA
		WCDMA B2 HSUPA @22.28dBm	681.0	mA
		WCDMA B4 HSDPA @21.94dBm	550.0	mA
		WCDMA B4 HSUPA @21.81dBm	547.0	mA
		WCDMA B5 HSDPA @22.13dBm	429.0	mA
		WCDMA B5 HSUPA @22.48dBm	459.0	mA
		LTE-FDD B2 @22.79dBm	709.0	mA
	LTE data transfer (GNSS OFF)	LTE-FDD B4 @22.89dBm	710.0	mA
		LTE-FDD B12 @23.39dBm	679.0	mA
	WCDMA voice call	WCDMA B2 @23.67dBm	663.0	mA



WCDMA B4 @23.36dBm	594.0	mA
WCDMA B5 @23.64dBm	522.0	mA

**Table 34: EC21-AUT Current Consumption** 

Parameter	Description	Conditions	Тур.	Unit
	OFF state	Power down	20	uA
		AT+CFUN=0 (USB disconnected)	0.99	mA
		WCDMA PF=64 (USB disconnected)	2.1	mA
	Sleep state	WCDMA PF=128 (USB disconnected)	1.7	mA
		LTE-FDD PF=64 (USB disconnected)	2.9	mA
		LTE-FDD PF=128 (USB disconnected)	2.4	mA
		WCDMA PF=64 (USB disconnected)	22.0	mA
	Idle state	WCDMA PF=64 (USB connected)	32.0	mA
		LTE-FDD PF=64 (USB disconnected)	23.6	mA
		LTE-FDD PF=64 (USB connected)	33.6	mA
$I_{VBAT}$	WCDMA data (GNSS OFF)	WCDMA B1 HSDPA @22.59dBm	589.0	mA
		WCDMA B1 HSUPA @22.29dBm	623.0	mA
		WCDMA B5 HSDPA @22.22dBm	511.0	mA
		WCDMA B5 HSUPA @21.64dBm	503.0	mA
	LTE data transfer	LTE-FDD B1 @23.38dBm	813.0	mA
		LTE-FDD B3 @22.87dBm	840.0	mA
		LTE-FDD B5 @23.12dBm	613.0	mA
	(GNSS OFF)	LTE-FDD B7 @22.96dBm	761.0	mA
		LTE-FDD B28 @23.31dBm	650.0	mA
	WCDMA voice	WCDMA B1 @24.21dBm	687.0	mA
	call	WCDMA B5 @23.18dBm	535.0	mA



**Table 35: EC21-E Current Consumption** 

Parameter	Description	Conditions	Тур.	Unit
	OFF state	Power down	TBD	uA
		AT+CFUN=0 (USB disconnected)	TBD	mA
		WCDMA PF=64 (USB disconnected)	TBD	mA
	Sleep state	WCDMA PF=128 (USB disconnected)	TBD	mA
		FDD-LTE PF=64 (USB disconnected)	TBD	mA
		FDD-LTE PF=128 (USB disconnected)	TBD	mA
		WCDMA PF=64 (USB disconnected)	TBD	mA
	Idle state	WCDMA PF=64 (USB connected)	TBD	mA
	(GNSS OFF)	LTE-FDD PF=64 (USB disconnected)	TBD	mA
		LTE-FDD PF=64 (USB connected)	TBD	mA
	GPRS data transfer (GNSS OFF)	GSM900 4DL/1UL @32.3dBm	220	mA
		GSM900 3DL/2UL @32.18dBm	387	mA
I <sub>VBAT</sub>		GSM900 2DL/3UL @30.3dBm	467	mA
		GSM900 1DL/4UL @29.4dBm	555	mA
		DCS1800 4DL/1UL @29.6dBm	185	mA
		DCS1800 3DL/2UL @29.1dBm	305	mA
		DCS1800 2DL/3UL @28.8dBm	431	mA
		DCS1800 1DL/4UL @29.1dBm	540	mA
		GSM900 4DL/1UL @26dBm	148	mA
		GSM900 3DL/2UL @26dBm	245	mA
		GSM900 2DL/3UL @25dBm	338	mA
	EDGE data transfer	GSM900 1DL/4UL @25dBm	432	mA
	(GNSS OFF)	DCS1800 4DL/1UL @26dBm	150	mA
		DCS1800 3DL/2UL @25dBm	243	mA
		DCS1800 2DL/3UL @25dBm	337	mA



	DCS1800 1DL/4UL @25dBm	430	mA
	WCDMA B1 HSDPA @22.5dBm	659	mA
	WCDMA B1 HSUPA @21.11dBm	545	mA
VCDMA data transfer	WCDMA B5 HSDPA @23.5dBm	767	mA
(GNSS OFF)	WCDMA B5 HSUPA @21.4dBm	537	mA
	WCDMA B8 HSDPA @22.41dBm	543	mA
	WCDMA B8 HSUPA @21.2dBm	445	mA
	LTE-FDD B1 @23.45dBm	807	mA
	LTE-FDD B3 @23.4dBm	825	mA
LTE data transfer	LTE-FDD B5 @23.4dBm	786	mA
(GNSS OFF)	LTE-FDD B7 @23.86dBm	887	mA
	LTE-FDD B8 @23.5dBm	675	mA
	LTE-FDD B20 @23.57dBm	770	mA
GSM voice call	GSM900 PCL=5 @32.8dBm	336	mA
WCDMA voice call	PCS1800 PCL=0 @29.3dBm	291	mA
	WCDMA B1 @23.69dBm	683	mA
	WCDMA B5 @23.61dBm	741	mA
	WCDMA B8 @23.35dBm	564	mA

**Table 36: EC21-KL Current Consumption** 

Parameter	Description	Conditions	Тур.	Unit
	OFF state	Power down	20	uA
	Sleep state  Idle state (GNSS OFF)	AT+CFUN=0 (USB disconnected)	0.98	mA
		LTE-FDD PF=64 (USB disconnected)	2.5	mA
I <sub>VBAT</sub>		LTE-FDD PF=128 (USB disconnected)	2.4	mA
		LTE-FDD PF=64 (USB disconnected)	23.0	mA
		LTE-FDD PF=64 (USB connected)	34.0	mA



	LTE-FDD B1 @23.65dBm	765.0	mA
LTE data transfer (GNSS OFF)	LTE-FDD B3 @23.2dBm	825.0	mA
	LTE-FDD B5 @23.2dBm	598.0	mA
	LTE-FDD B7 @23.7dBm	762.0	mA
	LTE-FDD B8 @23.1dBm	569.0	mA

**Table 37: EC21-V Current Consumption** 

Parameter	Description	Conditions	Тур.	Unit
	OFF state	Power down	20	uA
		AT+CFUN=0 (USB disconnected)	1.0	mA
	Sleep state	LTE-FDD PF=64 (USB disconnected)	2.5	mA
		LTE-FDD PF=128 (USB disconnected)	2.0	mA
I <sub>VBAT</sub>	Idle state (GNSS OFF)	LTE-FDD PF=64 (USB disconnected)	22.0	mA
		LTE-FDD PF=64 (USB connected)	32.0	mA
	LTE data transfer (GNSS OFF)	LTE-FDD B4 @22.79dBm	752.0	mA
		LTE-FDD B13 @23.26dBm	534.0	mA

**Table 38: EC21-AUV Current Consumption** 

Parameter	Description	Conditions	Тур.	Unit
	OFF state	Power down	20	uA
		AT+CFUN=0 (USB disconnected)	1.0	mA
	Idle state (GNSS OFF)	WCDMA PF=64 (USB disconnected)	2.0	mA
1		WCDMA PF=128 (USB disconnected)	1.6	mA
I <sub>VBAT</sub>		LTE-FDD PF=64 (USB disconnected)	2.4	mA
		LTE-FDD PF=128 (USB disconnected)	1.9	mA
		WCDMA PF=64 (USB disconnected)	24.0	mA
		WCDMA PF=64 (USB connected)	34.0	mA



	LTE-FDD PF=64 (USB disconnected)	24.0	mA
	LTE-FDD PF=64 (USB connected)	34.0	mA
	WCDMA B1 HSDPA @22.05dBm	586.0	mA
	WCDMA B1 HSUPA @22.29dBm	630.0	mA
WCDMA data transfer	WCDMA B5 HSDPA @22.43dBm	576.0	mA
(GNSS OFF)	WCDMA B5 HSUPA @22.43dBm	600.0	mA
	WCDMA B8 HSDPA @22.44dBm	577.0	mA
	WCDMA B8 HSUPA @21.78dBm	555.0	mA
	LTE-FDD B1 @23.12dBm	721.0	mA
	LTE-FDD B3 @23.04dBm	734.0	mA
LTE data transfer (GNSS OFF)	LTE-FDD B5 @23.16dBm	669.0	mA
,	LTE-FDD B8 @23.21dBm	698.0	mA
	LTE-FDD B28 @23.57dBm	790.0	mA
	WCDMA B1 @22.72dBm	640.0	mA
WCDMA voice call	WCDMA B5 @23.19dBm	638.0	mA
	WCDMA B8 @23.27dBm	626.0	mA

Table 39: GNSS Current Consumption of EC21 Series Module

Parameter	Description	Conditions	Тур.	Unit
Searching (AT+CFUN=	Searching	Cold start @Passive Antenna	58	mA
	(AT+CFUN=0)	Lost state @Passive Antenna	58	mA
I <sub>VBAT</sub> (GNSS)	Tracking (AT+CFUN=0)	Instrument Environment	33	mA
(61100)		Open Sky @Passive Antenna	35	mA
		Open Sky @Active Antenna	43	mA



## 6.5. RF Output Power

The following table shows the RF output power of EC21 module.

**Table 40: RF Output Power** 

Frequency	Max.	Min.
GSM850/GSM900	33dBm±2dB	5dBm±5dB
DCS1800/PCS1900	30dBm±2dB	0dBm±5dB
GSM850/GSM900 (8-PSK)	27dBm±3dB	5dBm±5dB
DCS1800/PCS1900 (8-PSK)	26dBm±3dB	0dBm±5dB
WCDMA bands	24dBm+1/-3dB	<-50dBm
LTE-FDD bands	23dBm±2dB	<-44dBm
LTE-TDD bands	23dBm±2dB	<-44dBm

# NOTE

In GPRS 4 slots TX mode, the maximum output power is reduced by 3.0dB. The design conforms to the GSM specification as described in *Chapter 13.16* of *3GPP TS 51.010-1*.

# 6.6. RF Receiving Sensitivity

The following tables show the conducted RF receiving sensitivity of EC21 series module.

Table 41: EC21-E Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO <sup>1)</sup>	3GPP (SIMO)
GSM900	-109.0dBm	/	/	-102.0dBm
DCS1800	-109.0dBm	/	/	-102.0dbm
WCDMA Band 1	-110.5dBm	/	/	-106.7dBm
WCDMA Band 5	-110.5dBm	/	/	-104.7dBm



WCDMA Band 8	-110.5dBm	/	/	-103.7dBm
LTE-FDD B1 (10M)	-98.0dBm	-98.0dBm	-101.5dBm	-96.3dBm
LTE-FDD B3 (10M)	-96.5dBm	-98.5dBm	-101.5dBm	-93.3dBm
LTE-FDD B5 (10M)	-98.0dBm	-98.5dBm	-101.0dBm	-94.3dBm
LTE-FDD B7 (10M)	-97.0dBm	-94.5dBm	-99.5dBm	-94.3dBm
LTE-FDD B8 (10M)	-97.0dBm	-97.0dBm	-101.0dBm	-93.3dBm
LTE-FDD B20 (10M)	-97.5dBm	-99.0dBm	-102.5dBm	-93.3dBm

#### Table 42: EC21-A Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO	3GPP (SIMO)
WCDMA B2	-110.0dBm	1		-104.7dBm
WCDMA B4	-110.0dBm	1	1	-106.7dBm
WCDMA B5	-110.5dBm		1	-104.7dBm
LTE-FDD B2 (10M)	-98.0dBm	-98.0dBm	-101.0dBm	-94.3dBm
LTE-FDD B4 (10M)	-97.5dBm	-99.0dBm	-101.0dBm	-96.3dBm
LTE-FDD B12 (10M)	-96.5dBm	-98.0dBm	-101.0dBm	-93.3dBm

#### Table 43: EC21-V Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO	3GPP (SIMO)
LTE-FDD B4 (10M)	-97.5dBm	-99.0dBm	-101.0dBm	-96.3dBm
LTE-FDD B13 (10M)	-95.0dBm	-97.0dBm	-100.0dBm	-93.3dBm

#### Table 44: EC21-AUT Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO	3GPP (SIMO)
WCDMA B1	-110.0dBm	/	/	-106.7dBm



WCDMA B5	-110.5dBm	/	/	-104.7dBm
LTE-FDD B1 (10M)	-98.5dBm	-98.0dBm	-101.0dBm	-96.3dBm
LTE-FDD B3 (10M)	-98.0dBm	-96.0dBm	-100.0dBm	-93.3dBm
LTE-FDD B5 (10M)	-98.0dBm	-99.0dBm	-102.5dBm	-94.3dBm
LTE-FDD B7 (10M)	-97.0dBm	-95.0dBm	-98.5dBm	-94.3dBm
LTE-FDD B28 (10M)	-97.0dBm	-99.0dBm	-102.0dBm	-94.8dBm

#### Table 45: EC21-AUTL Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO	3GPP (SIMO)
LTE-FDD B3 (10M)	-98.0dBm	-96.0dBm	-100.0dBm	-93.3dBm
LTE-FDD B7 (10M)	-97.0dBm	-95.0dBm	-98.5dBm	-94.3dBm
LTE-FDD B28 (10M)	-97.0dBm	-99.0dBm	-102.0dBm	-94.8dBm

#### Table 46: EC21-KL Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO	3GPP (SIMO)
LTE-FDD B1 (10M)	-98.0dBm	-99.5dBm	-100.5dBm	-96.3dBm
LTE-FDD B3 (10M)	-97.0dBm	-97.5dBm	-99.5dBm	-93.3dBm
LTE-FDD B5 (10M)	-98.0dBm	-99.5dBm	-100.5dBm	-94.3dBm
LTE-FDD B7 (10M)	-96.0dBm	-96.0dBm	-98.5dBm	-94.3dBm
LTE-FDD B8 (10M)	-97.0dBm	-99.0dBm	-101.0dBm	-93.3dBm

#### Table 47: EC21-CT Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO	3GPP (SIMO)
LTE-FDD B1 (10M)	-98.0dBm	-99.5dBm	-100.5dBm	-96.3dBm
LTE-FDD B3 (10M)	-97.0dBm	-97.5dBm	-99.5dBm	-93.3dBm



	LTE-FDD B5* (10M)	TBD	TBD	TBD	TBD	
--	-------------------	-----	-----	-----	-----	--

#### Table 48: EC21-J Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO	3GPP (SIMO)
LTE-FDD B1 (10M)	-97.5dBm	-98.7dBm	-100.2dBm	-96.3dBm
LTE-FDD B3 (10M)	-96.5dBm	-97.1dBm	-100.5dBm	-93.3dBm
LTE-FDD B8 (10M)	-98.4dBm	-99.0dBm	-101.2dBm	-93.3dBm
LTE-FDD B18 (10M)	-99.5dBm	-99.0dBm	-101.7dBm	-96.3dBm
LTE-FDD B19 (10M)	-99.2dBm	-99.0dBm	-101.4dBm	-96.3dBm
LTE-FDD B26 (10M)	-99.5dBm	-99.0dBm	-101.5dBm	-93.8dBm

#### Table 49: EC21-AUV Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO	3GPP (SIMO)
WCDMA B1	-110.0dBm	1	1	-106.7dBm
WCDMA B5	-111.0dBm	1		-104.7dBm
WCDMA B8	-111.0dBm	1	1	-103.7dBm
LTE-FDD B1 (10M)	-97.2dBm	-97.2dBm	-100.2dBm	-96.3dBm
LTE-FDD B3 (10M)	-98.2dBm	-98.7dBm	-100.7dBm	-93.3dBm
LTE-FDD B5 (10M)	-99.2dBm	-98.7dBm	-101.7dBm	-94.3dBm
LTE-FDD B8 (10M)	-97.7dBm	-97.2dBm	-101.2dBm	-93.3dBm
LTE-FDD B28 (10M)	-97.0dBm	-98.2dBm	-101.2dBm	-94.8dBm

### NOTES

- 1. <sup>1)</sup> SIMO is a smart antenna technology that uses a single antenna at the transmitter side and two antennas at the receiver side, which can improve RX performance.
- 2. "\*" means under development.



## 6.7. Electrostatic Discharge

The module is not protected against electrostatic discharge (ESD) in general. Consequently, it is subject to ESD handling precautions that typically apply to ESD sensitive components. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any application that incorporates the module.

The following table shows the module's electrostatic discharge characteristics.

**Table 50: Electrostatic Discharge Characteristics** 

Tested Points	Contact Discharge	Air Discharge	Unit
VBAT, GND	±5	±10	kV
All Antenna Interfaces	±4	±8	kV
Other Interfaces	±0.5	±1	kV



# 7 Mechanical Dimensions

This chapter describes the mechanical dimensions of the module. All dimensions are measured in mm.

## 7.1. Mechanical Dimensions of the Module

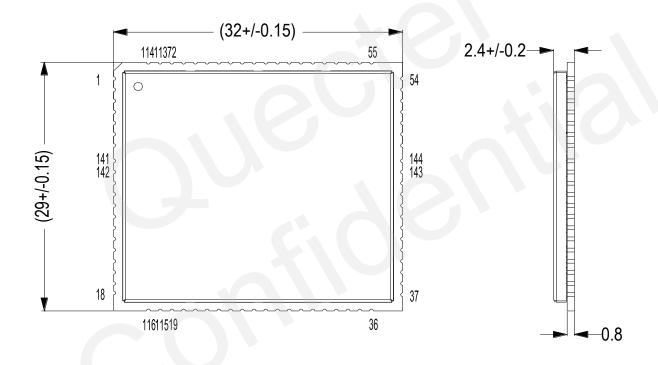


Figure 40: Module Top and Side Dimensions



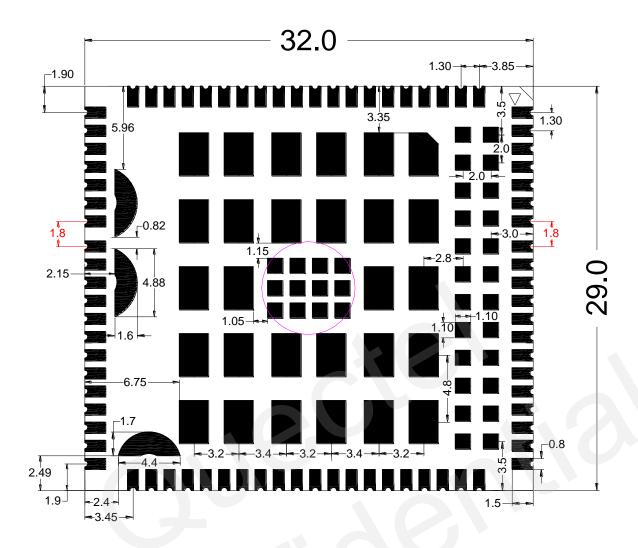


Figure 41: Module Bottom Dimensions (Bottom View)



# 7.2. Recommended Footprint

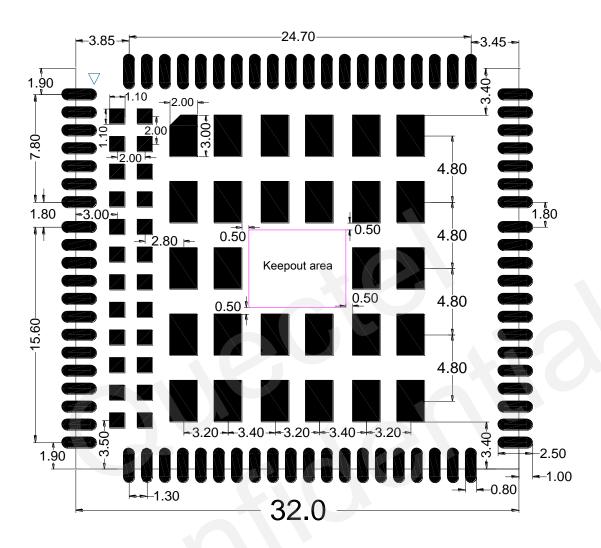


Figure 42: Recommended Footprint (Top View)

#### **NOTES**

- 1. The keepout area should not be designed.
- 2. For easy maintenance of the module, please keep about 3mm between the module and other components in the host PCB.



# 7.3. Design Effect Drawings of the Module



Figure 43: Top View of the Module

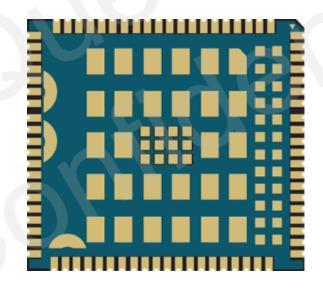


Figure 44: Bottom View of the Module

#### **NOTE**

These are design effect drawings of EC21 module. For more accurate pictures, please refer to the module that you get from Quectel.



# 8 Storage, Manufacturing and Packaging

## 8.1. Storage

EC21 is stored in a vacuum-sealed bag. The storage restrictions are shown as below.

- 1. Shelf life in the vacuum-sealed bag: 12 months at <40°C/90%RH.
- 2. After the vacuum-sealed bag is opened, devices that will be subjected to reflow soldering or other high temperature processes must be:
- Mounted within 72 hours at the factory environment of ≤30°C/60%RH
- Stored at <10%RH</li>
- 3. Devices require baking before mounting, if any circumstances below occurs:
- When the ambient temperature is 23°C±5°C and the humidity indicator card shows the humidity is >10% before opening the vacuum-sealed bag.
- Device mounting cannot be finished within 72 hours at factory conditions of ≤30°C/60%RH.
- 4. If baking is required, devices may be baked for 48 hours at 125°C±5°C.

#### **NOTE**

As the plastic package cannot be subjected to high temperature, it should be removed from devices before high temperature (125°C) baking. If shorter baking time is desired, please refer to *IPC/JEDECJ-STD-033* for baking procedure.



### 8.2. Manufacturing and Soldering

Push the squeegee to apply the solder paste on the surface of stencil, thus making the paste fill the stencil openings and then penetrate to the PCB. The force on the squeegee should be adjusted properly so as to produce a clean stencil surface on a single pass. To ensure the module soldering quality, the thickness of stencil for the module is recommended to be 0.18mm. For more details, please refer to **document [4]**.

It is suggested that the peak reflow temperature is from 235 to 245°C (for SnAg3.0Cu0.5 alloy). The absolute maximum reflow temperature is 260°C. To avoid damage to the module caused by repeated heating, it is suggested that the module should be mounted after reflow soldering for the other side of PCB has been completed. Recommended reflow soldering thermal profile is shown below:

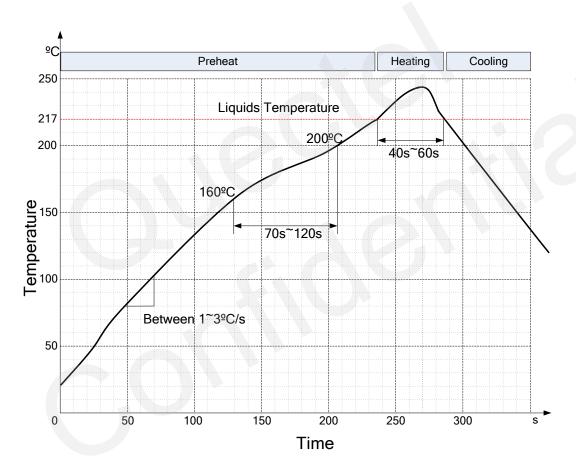


Figure 45: Reflow Soldering Thermal Profile

**NOTE** 

During manufacturing and soldering, or any other processes that may contact the module directly, NEVER wipe the module label with organic solvents, such as acetone, ethyl alcohol, isopropyl alcohol, trichloroethylene, etc.



# 8.3. Packaging

EC21 is packaged in tape and reel carriers. One reel is 11.53m long and contains 250pcs modules. The figure below shows the packaging details, measured in mm.

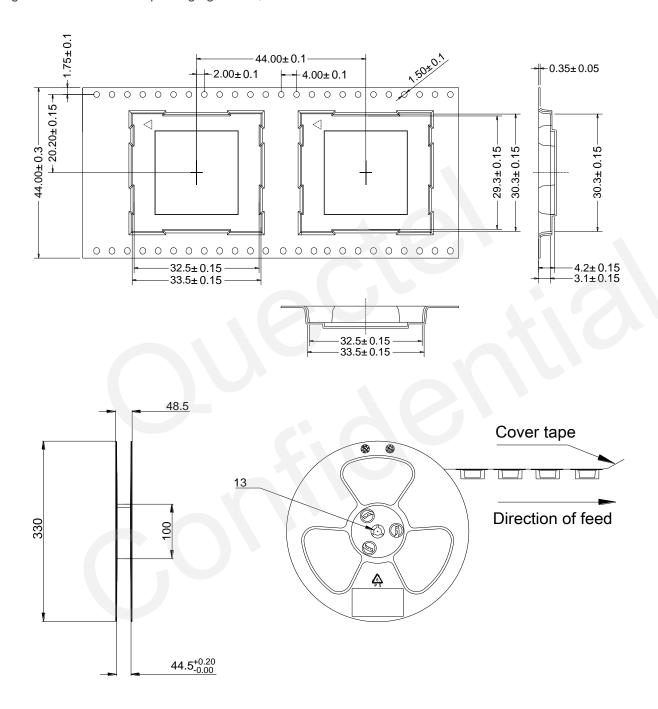


Figure 46: Tape and Reel Specifications



# 9 Appendix A References

**Table 51: Related Documents** 

SN	Document Name	Remark
[1]	Quectel_EC21_Power_Management_Application_Note	EC21 Power Management Application Note
[2]	Quectel_EC25&EC21_AT_Commands_Manual	EC25 and EC21 AT Commands Manual
[3]	Quectel_EC25&EC21_GNSS_AT_Commands_Manual	EC25 and EC21 GNSS AT Commands Manual
[4]	Quectel_Module_Secondary_SMT_User_Guide	Module Secondary SMT User Guide
[5]	Quectel_EC21_Reference_Design	EC21 Reference Design
[6]	Quectel_RF_Layout_Application_Note	RF Layout Application Note
[7]	Quectel_SGMII_Design_Application_Note	SGMII Design Application Note

**Table 52: Terms and Abbreviations** 

Description
Adaptive Multi-rate
Bits Per Second
Challenge Handshake Authentication Protocol
Coding Scheme
Circuit Switched Data
Clear To Send
Dual-carrier High Speed Packet Access
Delta Firmware Upgrade Over The Air



DL	Downlink
DTR	Data Terminal Ready
DTX	Discontinuous Transmission
EFR	Enhanced Full Rate
ESD	Electrostatic Discharge
FDD	Frequency Division Duplex
FR	Full Rate
GLONASS	GLObalnaya NAvigatsionnaya Sputnikovaya Sistema, the Russian Global Navigation Satellite System
GMSK	Gaussian Minimum Shift Keying
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
GSM	Global System for Mobile Communications
HR	Half Rate
HSPA	High Speed Packet Access
HSDPA	High Speed Downlink Packet Access
HSUPA	High Speed Uplink Packet Access
I/O	Input/Output
Inorm	Normal Current
LED	Light Emitting Diode
LNA	Low Noise Amplifier
LTE	Long Term Evolution
MIMO	Multiple Input Multiple Output
MO	Mobile Originated
MS	Mobile Station (GSM engine)
MT	Mobile Terminated



PAP	Password Authentication Protocol			
PCB	Printed Circuit Board			
PDU	Protocol Data Unit			
PPP	Point-to-Point Protocol			
QAM	Quadrature Amplitude Modulation			
QPSK	Quadrature Phase Shift Keying			
RF	Radio Frequency			
RHCP	Right Hand Circularly Polarized			
Rx	Receive			
SGMII	Serial Gigabit Media Independent Interface			
SIM	Subscriber Identification Module			
SIMO	Single Input Multiple Output			
SMS	Short Message Service			
TDD	Time Division Duplexing			
TDMA	Time Division Multiple Access			
TD-SCDMA	Time Division-Synchronous Code Division Multiple Access			
TX	Transmitting Direction			
UL	Uplink			
UMTS	Universal Mobile Telecommunications System			
URC	Unsolicited Result Code			
USIM	Universal Subscriber Identity Module			
Vmax	Maximum Voltage Value			
Vnorm	Normal Voltage Value			
Vmin	Minimum Voltage Value			
V <sub>IH</sub> max	Maximum Input High Level Voltage Value			



V <sub>IH</sub> min	Minimum Input High Level Voltage Value
V <sub>IL</sub> max	Maximum Input Low Level Voltage Value
V <sub>IL</sub> min	Minimum Input Low Level Voltage Value
V <sub>I</sub> max	Absolute Maximum Input Voltage Value
V <sub>I</sub> min	Absolute Minimum Input Voltage Value
V <sub>OH</sub> max	Maximum Output High Level Voltage Value
V <sub>OH</sub> min	Minimum Output High Level Voltage Value
V <sub>OL</sub> max	Maximum Output Low Level Voltage Value
V <sub>OL</sub> min	Minimum Output Low Level Voltage Value
VSWR	Voltage Standing Wave Ratio
WCDMA	Wideband Code Division Multiple Access
WLAN	Wireless Local Area Network



# 10 Appendix B GPRS Coding Schemes

**Table 53: Description of Different Coding Schemes** 

Scheme	CS-1	CS-2	CS-3	CS-4
Code Rate	1/2	2/3	3/4	1
USF	3	3	3	3
Pre-coded USF	3	6	6	12
Radio Block excl. USF and BCS	181	268	312	428
BCS	40	16	16	16
Tail	4	4	4	
Coded Bits	456	588	676	456
Punctured Bits	0	132	220	-
Data Rate Kb/s	9.05	13.4	15.6	21.4



# 11 Appendix C GPRS Multi-slot Classes

Twenty-nine classes of GPRS multi-slot modes are defined for MS in GPRS specification. Multi-slot classes are product dependent, and determine the maximum achievable data rates in both the uplink and downlink directions. Written as 3+1 or 2+2, the first number indicates the amount of downlink timeslots, while the second number indicates the amount of uplink timeslots. The active slots determine the total number of slots the GPRS device can use simultaneously for both uplink and downlink communications.

The description of different multi-slot classes is shown in the following table.

Table 54: GPRS Multi-slot Classes

Multislot Class	Downlink Slots	Uplink Slots	Active Slots
1	1	1	2
2	2	1	3
3	2	2	3
4	3	1	4
5	2	2	4
6	3	2	4
7	3	3	4
8	4	1	5
9	3	2	5
10	4	2	5
11	4	3	5
12	4	4	5



# 12 Appendix D EDGE Modulation and Coding Schemes

**Table 55: EDGE Modulation and Coding Schemes** 

Coding Scheme	Modulation	Coding Family	1 Timeslot	2 Timeslot	4 Timeslot
CS-1:	GMSK	/	9.05kbps	18.1kbps	36.2kbps
CS-2:	GMSK	/	13.4kbps	26.8kbps	53.6kbps
CS-3:	GMSK	1	15.6kbps	31.2kbps	62.4kbps
CS-4:	GMSK	1	21.4kbps	42.8kbps	85.6kbps
MCS-1	GMSK	С	8.80kbps	17.60kbps	35.20kbps
MCS-2	GMSK	В	11.2kbps	22.4kbps	44.8kbps
MCS-3	GMSK	A	14.8kbps	29.6kbps	59.2kbps
MCS-4	GMSK	С	17.6kbps	35.2kbps	70.4kbps
MCS-5	8-PSK	В	22.4kbps	44.8kbps	89.6kbps
MCS-6	8-PSK	A	29.6kbps	59.2kbps	118.4kbps
MCS-7	8-PSK	В	44.8kbps	89.6kbps	179.2kbps
MCS-8	8-PSK	A	54.4kbps	108.8kbps	217.6kbps
MCS-9	8-PSK	A	59.2kbps	118.4kbps	236.8kbps