

Motor Timer

H₂C

1/16 DIN Size Motor Timer Offers Five Selectable Time Ranges

- Each unit provides five field-selectable time ranges using the front panel time range selector
- ON-delay or Signal OFF-delay from clutch input are available
- Neon timing indicator and moving pointer show status
- Panel mounting adapters, sockets, protective cover and other accessories may be ordered separately





Ordering Information ____

■ TIMERS

Note: The complete part numbers shown here are the only H2C timers currently available. Some time ranges and supply voltages have been discontinued.

| Timing function | | ON-delay | ON-delay | Signal OFF-delay | | |
|------------------|---------------|--------------------------|--|--------------------|--|--|
| Contact type | Time limit | SPDT | SPDT | SPDT | | |
| | Instantaneous | SPDT | SPDT | - | | |
| Motor and clute | ch connection | Parallel | Independent | Independent | | |
| Terminal form | | 8-pin round socket | Front terminal screws | 8-pin round socket | | |
| Time range codes | | A = 1.25 sec to 30 hr, E | A = 1.25 sec to 30 hr, B = 0.2 sec to 6 hr, C = 0.5 sec to 12 hr | | | |
| Part number | | H2C-8-AC24-B | H2C-F-AC24-B | H2C-8R-AC24-A | | |
| | | H2C-8-AC120-A | H2C-F-AC12-C | H2C-8R-AC120-A | | |
| | | H2C-8-AC120-B | | H2C-8R-AC120-B | | |
| | | H2C-8-AC120-C | | H2C-8R-AC120-C | | |
| | | H2C-8-AC240-A | | H2C-8R-AC240-A | | |
| | | H2C-8-AC240-B | | H2C-8R-AC240-B | | |
| | | H2C-8-AC240-C | | H2C-8R-AC240-C | | |

■ ACCESSORIES

| Description | _ | | Part number |
|-------------------------|--|---|-------------|
| Sockets | 8-pin | Bottom surface or track mounting, top screw terminals; order hold down clips separately | |
| | (For H2C-8 and H2C-8R) | Bottom surface or track mounting, top screw terminals | P2CF-08 |
| | and 1120-011) | Bottom surface or track mounting, top screw terminals, finger safe terminal conforms to VDE0106/P100 | P2CF-08-E |
| | | Back mounting, for use with Y92F-30 mounting adapter, bottom screw terminals | P3G-08 |
| | | Terminal cover for P3G sockets, conforms to VDE0106/P100 | Y92A-48G |
| Hold-down clips | | One pair; for surface mounting using PF085A socket | |
| Panel mounting adapters | | Fits behind panel, ideal for side-by-side installation. Use P3G-08 socket | Y92F-30 |
| | | Flush mounting adapter (88 mm x 58 mm x 63.7 mm) | |
| | | Flush mounting adapter (58 mm x 50 mm x 63.7 mm) | |
| Time setting ring | | Use one or two to lock in settings | |
| Protective cover | | Hard plastic cover protects against dust, dirt and water; not for use with panel adapters Y92F-70 and Y92F-71 | |
| NEMA 4 cov | ver | Waterproof front cover | |
| Mounting tra | g track DIN rail, 50 cm (1.64 ft) length; 7.3 mm thick | | PFP-50N |
| - | | DIN rail, 1 m (3.28 ft) length; 7.3 mm thick | |
| | | DIN rail, 1m (3.28 ft) length; 16 mm thick | |
| End plate | | | PFP-M |
| Spacer | | | PFP-S |


| Time range code | Range selector position | \bigcirc) | \bigcirc) | \bigoplus | ◎) | \bigcirc) |
|-----------------------|-------------------------------|----------------|------------------|----------------|-----------------|---------------|
| Α | Display | 30 s | 3 m | 30 m | 3 h | 30 h |
| | Time range | 1.25 to 30 sec | 7.5 sec to 3 min | 1.25 to 30 min | 7.5 min to 3 hr | 1.25 to 30 hr |
| В | Display | 6 s | 60 s | 6 m | 60 m | 6 h |
| | Time range | 0.2 to 6 sec | 2 to 60 sec | 0.2 to 6 min | 2 to 60 min | 0.2 to 60 hr |
| С | Display | 12 s | 120 s | 12 m | 120 m | 12 h |
| | Timer range | 0.5 to 12 sec | 5 to 120 sec | 0.5 to 12 min | 5 to 120 min | 0.5 to 12 hr |


Specifications _____

| Part number | | H2C-8 | H2C-F | H2C-8R | | |
|-------------------|------------------------|--|--|----------------------------------|---------------------------|--|
| Supply voltage AC | | 24 V, 120 V or 240 V; 50/60 Hz | | | | |
| Operating voltage | | 85% to 110% of rated voltage | | | | |
| | | 90% to 110% of rated volta | ge if voltage continues to be | e applied after set time elapses | | |
| Power consumption | | 3.5 VA | | | | |
| Motor and clutch | h connectio | on | Parallel | Independent | Independent | |
| Timing functions | 3 | | ON-delay | ON-delay | Signal OFF-delay (clutch) | |
| Inputs | | | _ | _ | Voltage clutch signal | |
| Control output | Туре | Time limit | SPDT | SPDT | SPDT | |
| | | Instantaneous | SPDT | SPDT | - | |
| | | Max. load | 6 A, 250 VAC (p.f. = 1) | | | |
| | | Min. load | 100 mA, 5 VDC | | | |
| Repeat accurac | у | • | ±0.5% max.; ±1% max. for | 0.2 to 6 second range and (| 0.5 to 12 second range | |
| Setting error | | ±2% max. | - | | | |
| Resetting system | | Self resetting | Electric resetting | | | |
| Resetting time | | | 0.5 sec max. | | | |
| Indicators | | | Timing (red), moving pointer | | | |
| Materials | | Plastic case, knob | | | | |
| Mounting | | | Panel, surface, track | Surface or track | Panel, surface track | |
| Connections | | 8-pin round socket | Front terminal screws | 8-pin round socket | | |
| Weight | | | 180 g (6.3 oz) | 270 g (9.5 oz) | 180 g (6.3 oz) | |
| Approvals | | UL | Recognized, File No. E52800 | | | |
| | | CSA | Certified, File No. LR22310 | | | |
| | | Others | SEV, File No. 1021 | | | |
| Operating ambi | ent tempera | ature | -10° to 50°C (14° to 122°F) | | | |
| Humidity | | | 45% to 85% RH | | | |
| Vibration | Mechanic | al durability | 10 to 55 Hz, 0.75 mm (0.03 in) double amplitude | | | |
| | Malfunction durability | | 10 to 55 Hz, 0.5 mm (0.02 in) double amplitude | | | |
| Shock | Mechanical durability | | 100G | | | |
| | Malfunction | on durability | 15 G | | | |
| Variation due to | voltage ch | ange | ±1% max. | | | |
| Variation due to | temperatu | re change | ±1% max. | | | |
| Insulation resist | ance | | 100 MΩ min. at 500 VDC | | | |
| Dielectric streng | jth | | 2,500 VAC, 50/60 Hz for 1 minute between current-carrying and non-current carrying parts | | | |
| | | 2,000 VAC, 50/60 Hz for 1 minute between contact and control circuit and between contacts of different poles | | | | |
| Service life | | Mechanical | 30 million operations minim | um | | |
| | Electrical | | 200,000 operations at 6 A, 250 VAC (p.f. = 1) | | | |

Engineering Data

■ ELECTRICAL SERVICE LIFE

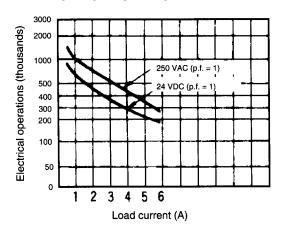


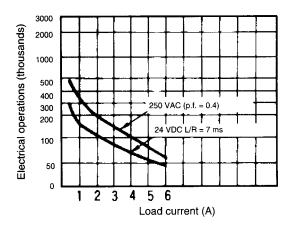

Timing Charts


In the schematic diagrams, each thick line indicates the external wiring.


■ H2C-8 ON-DELAY TIMER

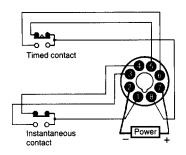


ON Motor and clutch (2-7)OFF ON NC (8-5) Time-limit ON contacts NO (8-6) ON NC (1-4) OFF Instantaneous ON NO (1-3) contacts OFF Timing operation indicator T = set time Rt = reset time

 
■ H2C-8R SIGNAL OFF-DELAY TIMER



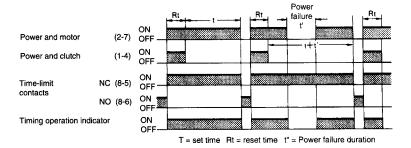

■ H2C-F ON-DELAY TIMER

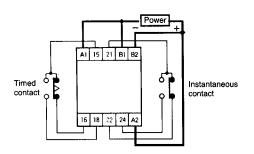

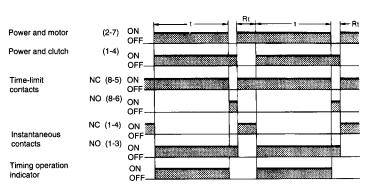


Dimensions


Unit: mm (inch)

■ TIMERS

 
H2C-8 and H2C-8R





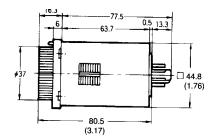



OMRON. _

 


| Dimension L | Max. load |
|----------------|-----------|
| 3 mm (0.12 in) | 3 A |
| 8 mm (0.32 in) | 6 A |


H2C-F

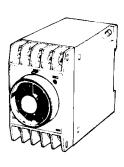

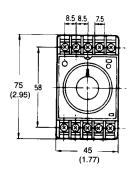

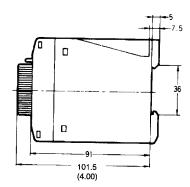

Mounting holes

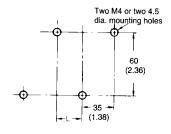



| Dimension L | Max. load |
|-----------------|-----------|
| 10 mm (0.39 in) | 1 A |
| 15 mm (0.59 in) | 3 A |
| 20 mm (0.79 in) | 6 A |

■ ACCESSORIES

  
PF085A Bottom Surface or Track Mounting Socket







Terminal arrangement

 


Mounting holes




P2CF-08 Track Mounting/Front Connecting Socket




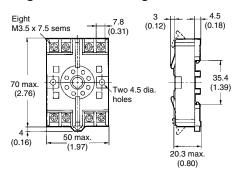

 Terminal Arrangement/ Internal Connections (Top View)




Surface Mounting Holes

 


P2CF-08E Finger Safe Terminal Type


Conforming to VDE0106/P100

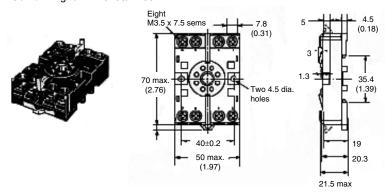

P3G-08 Back Connecting Socket



 

 



Terminal Arrangement



Y92A-48G Finger Safe Terminal for P3G-08

 Conforming to VDE0106/P100



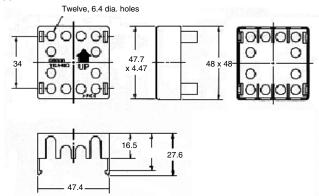



Y92F-30 Mounting Adapter (For H2C-8 and H2C-8R)

 Adapter installs behind the panel. It is ideal for side by side installation. Use P3GA-08 socket.








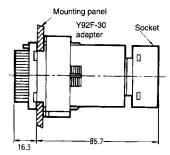

Panel cutout

 

| Dimension L | Max. load |
|----------------|-----------|
| 3 mm (0.12 in) | 3 A |
| 8 mm (0.32 in) | 6 A |


Note: Recommended panel thickness is 1 to 3.2 mm.

H2C

Unit: mm (inch)


Y92F-70 Mounting Adapter

Charcoal gray panel adapter installs through panel front. Timer face fits bezel, rear of timer clips to adapter. Use P3G-08.

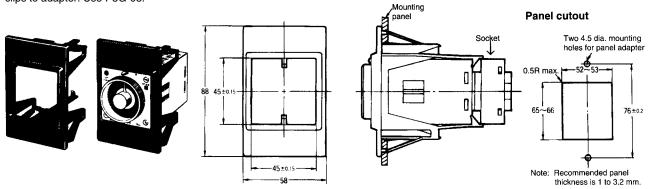


Y92F-71 Mounting Adapter

Charcoal gray panel adapter installs through panel front. Timer face fits bezel, rear of timer clips to adapter. Use P3G-08.

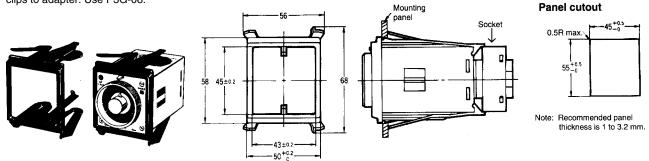

Y92A-Y1 Time Setting Ring

The time setting ring allows the operator to lock in a selected, preset time. A recess in the ring engages a notch in the lock ring tab, stopping movement of the dial. The time setting ring minimizes setting error by repeatedly stopping at the same point on the dial. For machines that are regularly set for two time settings, two Y92A-Y1 Time Setting Rings may be installed for two setpoints.

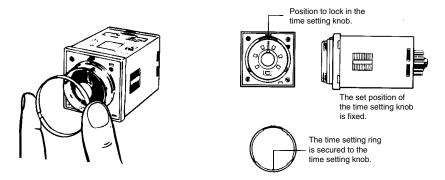


Y92A-48B Protective Cover


The protective cover protects the front panel, particularly the time setting section, against dust, dirt and water. It also prevents the set value from being altered due to accidental contact with the time setting knob.


Note:

- 1. The Y92A-48B Protective Cover is made of a hard plastic and therefore must be removed to change the timer set value.
- The Protective Cover cannot be mounted if the Panel Cover (sold separately) is used on the Timer.
- 3. When using a front cover for flush mounting, use the Y92F-30 Adapter. The Y92F-73 or Y92F-74 Flush Mounting Adapter cannot be used.

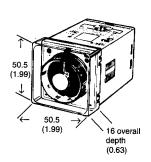

 
Y92H-1 Hold Down ClipsUse these clips with H2C-8 and H2C-8R timers mounted in a PF085A socket. The pair of clips secure the timer to the socket in installations with significant vibration.




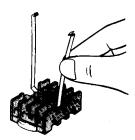



PFP-100N, PFP-50N Mounting Track

 PFP-100N2 Mounting Track

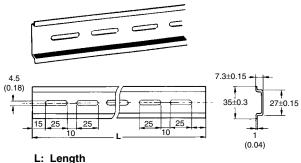

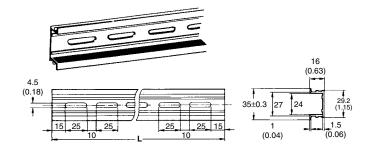



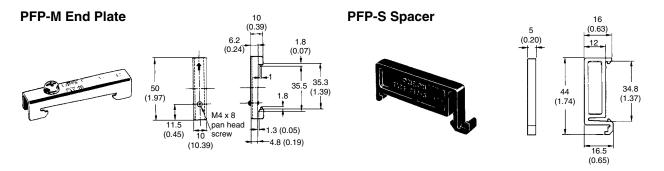


Connections.

| Part number | Input (clutch) terminal numbers | | Power supply terminal numbers | | Output terminal nu | Output terminal number | | |
|-------------|---------------------------------|--------|-------------------------------|--------|--------------------|------------------------|----|----|
| | AC common | AC hot | AC common | AC hot | Туре | COM | NC | NO |
| H2C-8 | - | _ | 2 | 7 | Time limit | 8 | 5 | 6 |
| | | | | | Instantaneous | 1 | 4 | 3 |
| H2C-8R | 1 | 4 | 2 | 7 | Time limit | 8 | 5 | 6 |
| H2C-F | B2 | B1 | A2 | A1 | Time limit | 15 | 16 | 18 |
| | | | | | Instantaneous | 21 | 22 | 24 |

Installation_

■ SELECTING POWER FREQUENCY

H2C motor timers are designed to operate accurately on either 50 Hz or 60 Hz. A selector switch is located on the rear of the case in the lower left-hand corner. Set the proper frequency for your installation before mounting the timer. If the power frequency does not match the setting, the time measurement will be inaccurate.

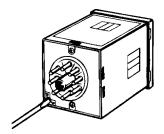




Operation -

■ SELECTING TIME RANGES

The time range selector is a rotary switch located on the top right corner of the front panel. Use a screwdriver or Allen wrench to turn the switch. First, turn power OFF to the timer. The five time range choices are 60 degrees apart. Above the switch is a small window that shows the range selection.

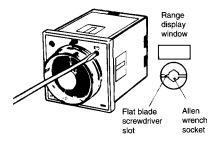

WARNING

Do not change the time range while the timer is operating. This will cause the timer to malfunction.

Mounting.

■ PANEL MOUNTING


Using Y92F-30 Adapter


Insert the timer through the panel cutout. Push the Y92F-30 adapter from the rear of the timer as far forward toward the panel as possible. Wire the P3G-08 socket, then push it onto the rear of the timer. The tighten the two retaining screws. To release the adapter, lift the tab at the rear of the adapter.






Several timers may be panel mounted close together using the Y92F-30 adapter as shown here. When mounting two or more timers in a vertical line, arrange the adaptors so that their molded tabs are positioned on the right and left sides. When mounting two or more timers in a horizontal line, arrange the adapters so that their molded tabs are positioned on the top and bottom sides.

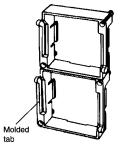

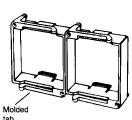

 
Panel cutout for side-by-side mounting of two timers



Using Y92F-70 and Y92F-71 Adapters

Install the H2C-8 and H2C-8R timer, face first, into the back side of the Y92F-70 or Y92F-71 adapter so the bezel fits snugly. Be sure the retaining clips at the back of the adapter fit into the slots on either side of the timer. Compress the top and bottom tabs of the adapter then push the adapter through the front side of the panel cutout. Be sure the tabs extend after installation for a secure fit.

To remove the timer from the adapter, unclip the two retaining clips at the back of the adapter. To remove the adapter and timer from the panel as a unit, compress the tabs behind the panel and push the unit out the front of the panel.

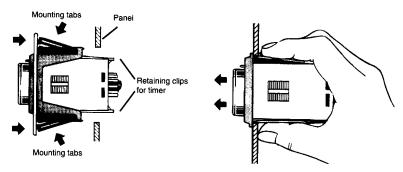


■ TRACK MOUNTING


H2C-F with Built-in Track Adapter

Mounting

First, hook portion "A" on the rear of the timer onto and edge of the track. Then, press the timer in direction "B" until the latch on the bottom rear of the timer latches securely.

Pull the latch "C" with a flat blade screwdriver and remove the timer from the mounting track.

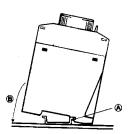

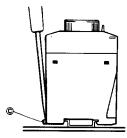


P2CF-08 Socket (For H2C-8 and H2C-BR)

Mounting


The P2CF-08 socket has two hooks that secure the timer to the socket. Be sure to allow at least 20 mm (0.79 in) clearance above and below the socket to gain access and to release the hooks for servicing and maintenance. Insert timer into the socket. Latch hooks. Then clip the rear of the socket to the track. Push the bottom onto the track until the latch hooks securely.


Removal


Pull the latch on the socket with a flat-blade screwdriver and remove the timer and socket as one unit.

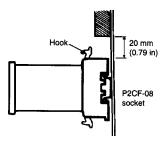


■ TRACK MOUNTING

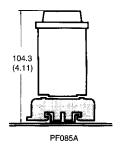

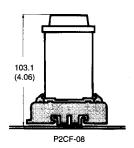

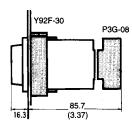

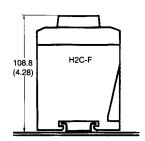

NOTE: DIMENSIONS ARE SHOWN IN MILLIMETERS. To convert millimeters to inches divide by 25.4.

OMRON

OMRON ELECTRONICS LLC

One East Commerce Drive Schaumburg, IL 60173

1-800-55-OMRON

Cat. No. GC TMCN1

2/02

OMRON ON-LINE

Global - http://www.omron.com USA - http://www.omron.com/oei Canada - http://www.omron.com/oci

Specifications subject to change without notice.

OMRON CANADA, INC.

885 Milner Avenue Scarborough, Ontario M1B 5V8

416-286-6465

Printed in the U.S.A.