
T2 Terminator Tooling



Application Tooling Specification Sheet

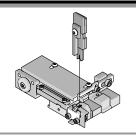

Order No. 63912-3500

FEATURES

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tablength
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements


SCOPE

Products: 1.27mm (0.50") Pitch SATA Crimp PowerTerminal, 20-24 AWG.

Terminal Series No.	Terminal	Wire Size			Insulation	Ctrin I anath			
	Order No.			IPC/WHM	A-A620 (1)	Termi	nal (2)	Strip Length	
Series No.	Order No.	AWG	mm²	mm	ln.	mm	ln.	mm	ln.
47634	47634-1000	20	0.52	1.55-1.65	.061065	1.55-1.65	.061065	2.50-3.50	.098138
	47634-1001	22	0.32	1.50-1.65	.059065	1.40-1.65	.055065	2.50-3.50	.098138
	47634-1002	24	0.20	1.50-1.65	.059065	1.25-1.65	.049065	2.50-3.50	.098138
67581	67581-0010	20	0.52	1.55-1.65	.061065	1.55-1.65	.061065	2.50-3.50	.098138
	67581-0011	22	0.32	1.50-1.65	.059065	1.40-1.65	.055065	2.50-3.50	.098138
	67581-0012	24	0.20	1.50-1.65	.059065	1.25-1.65	.049065	2.50-3.50	.098138
(A) T 1: (C IDO A000 OL O.: 1: C									

(1) To achieve optimum IPC-A620 Class 2 insulation crimps. For larger wire diameter use Applicator order no. 63866-1000. (2) Overall insulation OD specification for terminal.

DEFINITION OF TERMS

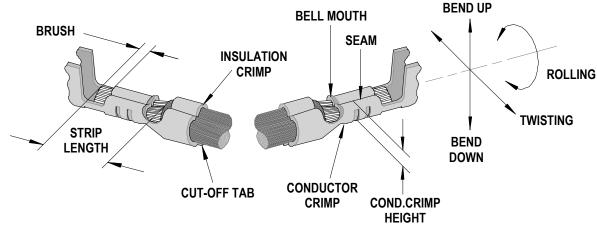

The above terminal drawing is a generic terminal representation. It is not an image of any terminal listed in the scope.

Doc No: ATS-639123500 Release Date: 04-01-10 **UNCONTROLLED COPY** Page 1 of 6 Revision: A Revision Date: 07-20-10

CRIMP SPECIFICATION

Terminal Series No.	Bell n	nouth	Cut-off Tab	Maximum	Conductor Brush		
Terminal Series No.	mm	ln.	mm	ln.	mm In.		
47634	0.20-0.50	.008020	0.30	.012	0.00-1.00	.000039	
67581	0.20-0.50	.008020	0.30	.012	0.00-1.00	.000039	

Terminal Series No.	Bend up E	Bend down	Twist	Roll	Punch Width (Ref)			Seam			
	Doc	***	Doggoo		Conductor		Insulation				
Series No.	Degree		Degree		mm	ln	mm	In	Seam shall not be open		
47634	8	3	4	8	1.60	.063	2.20	.087	and no wire allowed out of the crimping area		
67581	8	3	4	8	1.60	.063	2.20	.087	or the chimping area		

After crimping, the crimp profiles should measure the following:

Terminal Series No.	Wire Size			luctor Height	Insul Crimp Hei	Pull Force Minimum		
	AWG	mm ²	mm	ln.	mm	ln.	N	Lb.
	20	0.52	1.10-1.20	.043047	2.50	.098	58.8	13.21
47634	22	0.32	1.05-1.15	.041045	2.35	.093	39.2	8.80
	24	0.20	0.97-1.07	.038042	2.35	.093	29.4	6.61
	20	0.52	1.10-1.20	.043047	2.50	.098	58.8	13.21
67581	22	0.32	1.05-1.15	.041045	2.35	.093	39.2	8.80
	24	0.20	0.97-1.07	.038042	2.35	.093	29.4	6.61

Tool Qualification Notes:

- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.


Doc No: ATS-639123500 Release Date: 04-01-10 **UNCONTROLLED COPY** Page 2 of 6 Revision: A Revision Date: 07-20-10

PARTS LIST

T2 Terminator 63912-3500										
Item	Order No	Quantity								
Perishable Tooling										
	63912-3570	63912-3570	Tool Kit (All "Y" Items)	REF						
1	63444-1604	63444-1604	Conductor Punch	1 Y						
2	63445-1641	63445-1641	Conductor Anvil	1 Y						
3	63446-2239	63446-2239	Insulation Punch	1 Y						
4	63445-2271	63445-2271	Insulation Anvil	1 Y						
5	63443-0002	63443-0002	Front Cut-Off Plunger	1 Y						
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y						
Other Components										
7	11-18-4083	60707-8	Feed Guide	1						
8	11-24-1067	4996-4	Cut-off Plunger Spring	1						
9	11-40-4039	8302-5	Front Plunger Striker	1						
10	63443-0009	63443-0009	Front Scrap Chute	1						
11	63443-0024	63443-0024	Key	1						
12	63443-0085	63443-0085	Wire Stop L-Bracket	1						
13	63443-0090	63443-0090	Wire Stop	1						
14	63443-1718	63443-1718	18.80mm Height Spacer	1						
15	63443-2216	63443-2216	16.00mm Spacer	1						
16	63443-2302	63443-2302	3.10mm Spacer	1						
17	63443-6004	63443-6004	Rear Cover	1						
		Fra	me							
18	63800-8500	63800-8500	T2 Terminator	1						
		Hardy	ware							
19	N/A	N/A	M3 by 6 Long FHCS	1**						
20	N/A	N/A	M3 by 6 Long SHCS	2**						
21	N/A	N/A	M4 by 6 Long SHCS	2**						
22	N/A	N/A	M4 by 12 Long BHCS	2**						
23	N/A	N/A	M4 by 14 Long SHCS	2**						
24	N/A	N/A	M4 by 50 Long SHCS	2**						
25	N/A	N/A	M5 by 12 Long SHCS	1**						
26	N/A	N/A	#10-32 by 3/8"Long BHCS	1**						
** Ava	** Available from an industrial supply company such as MSC (1-800-645-7270).									

UNCONTROLLED COPY Page 3 of 6 Doc No: ATS-639123500 Release Date: 04-01-10 Revision Date: 07-20-10

Revision: A

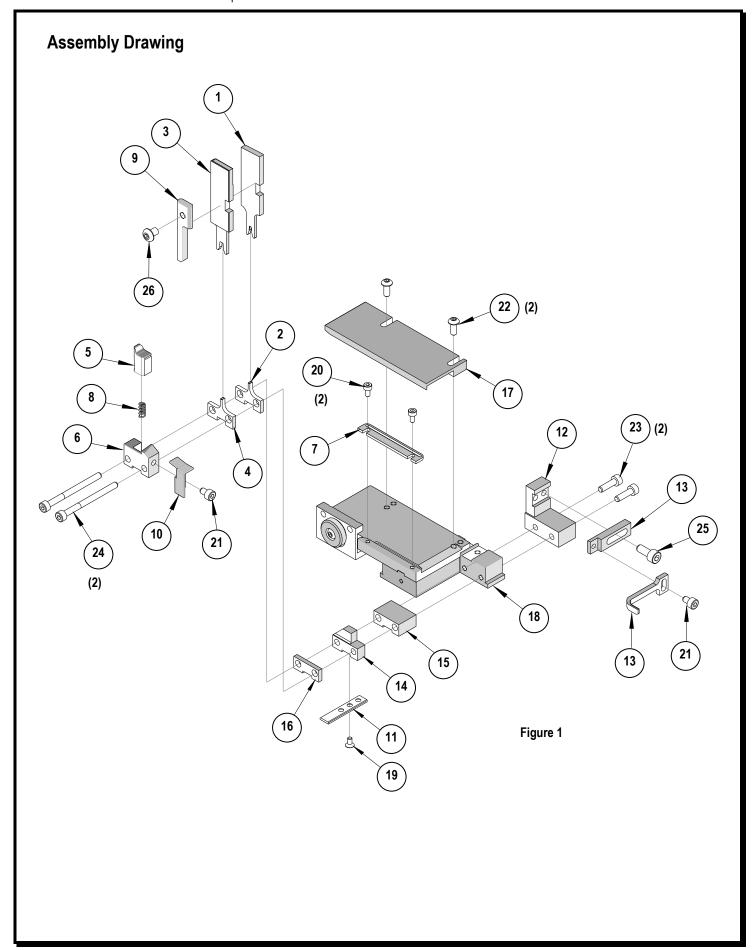

Doc No: ATS-639123500 Revision: A Release Date: 04-01-10 Revision Date: 07-20-10

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

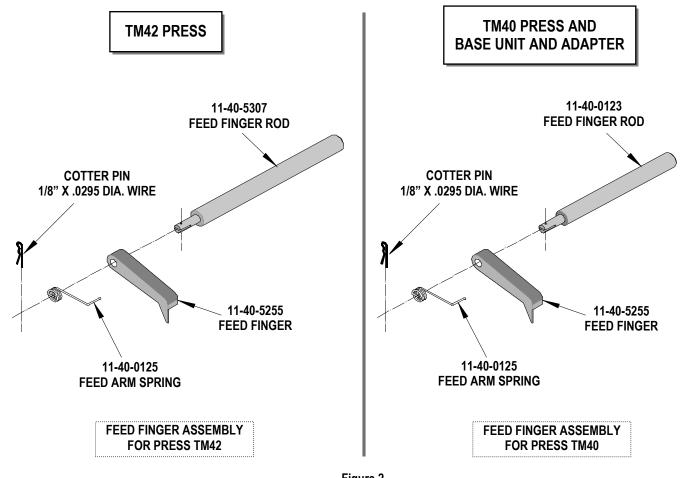


Figure 2

UNCONTROLLED COPY Doc No: ATS-639123500 Release Date: 04-01-10 Page 5 of 6 Revision Date: 07-20-10

Revision: A

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

http://www.molex.com

UNCONTROLLED COPY Doc No: ATS-639123500 Release Date: 04-01-10 Page 6 of 6 Revision Date: 07-20-10

Revision: A