

S.SCHURTER

**Schurter** 

0041.8845.4107

Part Number:

Manufacturer/Brand:

Product description

RoHs Status Stock Condition

Datasheets:

Ship From Shipment Way 0041.8845.4107

Schurter

SWITCH PUSHBUTTON SPST-NO

0041.8845.4107.pdf

Lead free / RoHS Compliant 17303 pcs stock

Hong Kong DHL/Fedex/TNT/UPS/EMS

**REQUEST FOR QUOTATION** 

Image may be representation. See specifications for product details.

**9.SCHURTE** 

ELECTRONIC COMPONE

	Specifications of 0041.8845.4107
PART NUMBER	0041.8845.4107
MANUFACTURER	Schurter
DESCRIPTION	SWITCH PUSHBUTTON SPST-NO
LEAD FREE STATUS / ROHS STATUS	Lead free / RoHS Compliant
QUANTITY AVAILABLE	17303 pcs
DATA SHEET	0041.8845.4107.pdf
TYPE	-
TERMINATION STYLE	-
SWITCH FUNCTION	-
SERIES	-
PANEL CUTOUT DIMENSIONS	-
PACKAGING	-
OPERATING TEMPERATURE	-
MOUNTING TYPE	-
MOISTURE SENSITIVITY LEVEL (MSL)	1 (Unlimited)
MECHANICAL LIFE	-
LEAD FREE STATUS / ROHS STATUS	Lead free / RoHS Compliant
INGRESS PROTECTION	-
ILLUMINATION VOLTAGE (NOMINAL)	-
ILLUMINATION TYPE, COLOR	-
FEATURES	-
ELECTRICAL LIFE	-
DETAILED DESCRIPTION	Pushbutton Switch
CURRENT RATING	-
COLOR - ACTUATOR/CAP	-
CIRCUIT	-
ACTUATOR TYPE	-

## **Related Tags**

Schurter 0041.8845.4107	0041.8845.4107 Distributor	0041.8845.4107 Supplier
0041.8845.4107 Price	0041.8845.4107 Pictures	0041.8845.4107 Image
0041.8845.4107 PDF Datasheet	0041.8845.4107 Download Datasheet	0041.8845.4107 Datasheet
0041.8845.4107 Stock	Buy 0041.8845.4107	Buy Schurter 0041.8845.4107
Schurter 0041.8845.4107	Schurter Supplier	Schurter Distributor
Schurter 0041.8845.4107	Schurter Inc. 0041.8845.4107	

## **Related Products**

	Manufacturers:	Sc
CCUUDTED		

9.SCHURTER

Description: SWITCH PUSH SPST-NO 200MA 60V In stock: 11574 pcs

**RFQ** 

0041.8841.3107

SCHURTER

Manufacturers: Schurter

0041.8841.7107

Description: SWITCH PUSH SPST-NO 200MA 60V In stock: 10970 pcs

**RFQ** 

0041.8850.5127

0041.8847.5127

Manufacturers: Schurter SCHURTER

Description: SWITCH PUSH DPST-NO 200MA 60V

In stock: 5944 pcs

**RFQ** 

SCHURTER

Manufacturers: Schurter

Description: SWITCH PUSHBUTTON SPST-NO In stock: 13742 pcs

**RFQ** 

0041.8846.5127 Manufacturers: Schurter

9.SCHURTER

9.SCHURTER

9.SCHURTER

SCHURTER Description: SWITCH PUSH SPST-NO 200MA 60V In stock: 15845 pcs

**RFQ** 

SCHURTER

0041.8845.7107 Manufacturers: Schurter

Description: SWITCH PUSHBUTTON SPST-NO In stock: 20416 pcs

**RFQ** 

0041.8841.6107 Manufacturers: Schurter

Description: SWITCH PUSH SPST-NO 200MA 60V

In stock: 20223 pcs

**RFQ** 

9.SCHURTER

0041.8843.7107 Manufacturers: Schurter

Description: SWITCH PUSHBUTTON SPST-NO In stock: 23606 pcs

**RFQ** 

0041.8846.3117 Manufacturers: Schurter

Description: SWITCH PUSH SPST-NO 200MA 60V

In stock: 5352 pcs

**RFQ** 

SCHURTER

0041.8841.3307 Manufacturers: Schurter

Description: SWITCH PUSH SPST-NO 200MA 60V

In stock: 6492 pcs **RFQ** 

0041.8845.3107 Manufacturers: Schurter

Description: SWITCH PUSHBUTTON SPST-NO In stock: 19126 pcs

**RFQ** 

SCHURTER

0041.8847.1137

Manufacturers: Schurter Description: SWITCH PUSH DPST-NO 200MA 60V

In stock: 11474 pcs **RFQ** 



**Copyright © 2020 Reliable Distributor of Electronic Components** 











