



REV. A

ASSEMBLY INSTRUCTIONS FOR GRDBAR - HME GROUND BAR

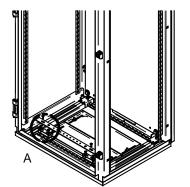

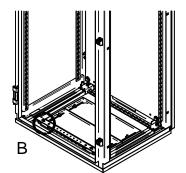

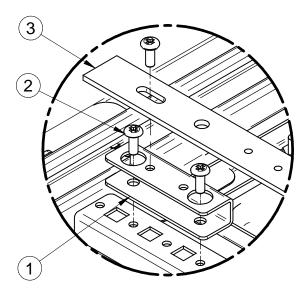

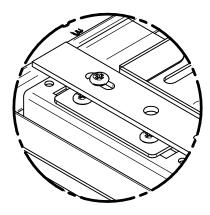

DETAIL B TYP BOTH SIDES

DETAIL A TYP BOTH SIDES

INSTRUCTIONS:

A) ALIGN SPACER BRACKETS (ITEM#1) TO ROUND HOLES IN FRAME AS SHOWN (SECOND HOLE FROM EDGE), (SEE DETAIL A).

B) SECURE BRACKETS TO FRAME USING SCREWS (ITEM #2).

C) ALIGN HORIZONTAL GROUND BAR (ITEM#3) TO ROUND HOLES IN SPACER BRACKET AS SHOWN AND SECURE USING SCREWS.

NOTE: GROUND BAR CAN BE MOUNTED LEFT TO RIGHT AT THE FRONT OR REAR OF THE FRAME

ITEM	DESCRIPTION		QTY
1	SPACER BRACKET		2
2	SCREW #12X1/2 PAN HEAD PH		6
3	HORIZ. GROUND BAR		1
TOOL BOX		Phillips Screw Driver	

